

# GMB HR84

Housing Relay - 8 Opto In, 4 Outputs

# GMM 5115

grifo® Mini Module AT89c5115

## TECHNICAL MANUAL



**grifo®**  
ITALIAN TECHNOLOGY

Via dell' Artigiano, 8/6  
40016 San Giorgio di Piano  
(Bologna) ITALY  
E-mail: [grifo@grifo.it](mailto:grifo@grifo.it)



<http://www.grifo.it>      <http://www.grifo.com>  
Tel. +39 051 892.052 (a. r.)      FAX: +39 051 893.661

GMB HR84 & GMM 5115      Rel. 5.00      Edition 17 November 2004

, GPC®, grifo®, are trade marks of grifo®



# GMB HR84

Housing Relay - 8 Opto In, 4 Outputs

# GMM 5115

grifo® Mini Module AT89c5115

## TECHNICAL MANUAL

Modular plastic Container **DIN 50022 Modulbox**, model **M4 HC53**; size: front **90 x 71 mm**, height **58 mm**; mounting on **Omega** rail DIN 46277-1 and DIN 46277-3; **GMM 5115** already installed on the **28 pin** socket; **8** Optocoupled Inputs that can be both **NPN** or **PNP**; status of **8** inputs shown by **8 LEDs**; two inputs can perform **Interrupt** functions; three inputs can perform Counter functions; **4** Relay Outputs **5 A**; status of **4** outputs shown by **4 LEDs**; four outputs can perform automatic timing functions; Serial Line in RS 232, RS 422, RS 485, current loop or **TTL**; all signals can be connected through connectors featuring **Normalized** pin out; **3 I/O TTL** signals; **I<sup>2</sup>C BUS** available on connector for external devices; **Switching** power supply on board; protection of on board logic, through **TransZorb**; power supply in **DC** or in **AC**: 10 ÷ 40 Vdc or 8÷24 Vac for logic supply; possibility to manage internal **FLASH** and **EEPROM** in **In System Programming** mode; free software for **PC**, downloadable from **ATMEL** web site, to support **ISP** programming upload the generated code into on-board **FLASH** memory; wide range of development software available: **C** Compilers (**µC/51**); **BASIC** Compilers (**BASCOM 8051**); **LADDER** Compilers (**LadderWORK**); etc.; several demo programs and use examples provided as source code completely commented available for every development structure

**grifo**®

ITALIAN TECHNOLOGY

Via dell' Artigiano, 8/6  
40016 San Giorgio di Piano  
(Bologna) ITALY

E-mail: grifo@grifo.it

<http://www.grifo.it>

<http://www.grifo.com>

Tel. +39 051 892.052 (a. r.) FAX: +39 051 893.661



GMB HR84 & GMM 5115

Rel. 5.00

Edition 17 November 2004

, GPC®, grifo®, are trade marks of grifo®

## DOCUMENTATION COPYRIGHT BY **grifo®**, ALL RIGHTS RESERVED

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, either electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written consent of **grifo®**.

### IMPORTANT

Although all the information contained herein have been carefully verified, **grifo®** assumes no responsibility for errors that might appear in this document, or for damage to things or persons resulting from technical errors, omission and improper use of this manual and of the related software and hardware.

**grifo®** reserves the right to change the contents and form of this document, as well as the features and specification of its products at any time, without prior notice, to obtain always the best product.

For specific informations on the components mounted on the card, please refer to the Data Book of the builder or second sources.

### SYMBOLS DESCRIPTION

In the manual could appear the following symbols:



Attention: Generic danger




Attention: High voltage



Attention: ESD sensitive device

### Trade Marks

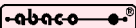 , GPC® , **grifo®** : are trade marks of **grifo®**.

Other Product and Company names listed, are trade marks of their respective companies.

# GENERAL INDEX

INTRODUCTION .....	1
CARD VERSION .....	3
GENERAL INFORMATION .....	4
OPTOCOUPLED DIGITAL INPUT LINES .....	6
DIGITAL RELAYS OUTPUTS .....	6
I/O TTL SIGNALS .....	6
I <sup>2</sup> C BUS LINES .....	8
POWER SUPPLY SECTION .....	8
SERIAL COMMUNICATION .....	9
TECHNICAL FEATURES .....	10
GENERAL FEATURES .....	10
PHYSICAL FEATURES .....	10
ELECTRIC FEATURES .....	11
INSTALLATION .....	12
CONNECTIONS .....	12
CN5 - POWER SUPPLY CONNECTOR .....	12
CN3 - I <sup>2</sup> C BUS LINE CONNECTOR .....	13
CN2 - SERIAL LINE CONNECTOR .....	14
CN6 - OPTOCOUPLED DIGITAL INPUTS CONNECTOR .....	16
CN1 - RELAYS OUTPUTS CONNECTOR GROUPS A AND B .....	18
CN4 - TTL I/O, D/A, ETC. CONNECTOR .....	20
INTERRUPTS .....	21
I/O CONNECTION .....	21
POWER SUPPLY .....	22
CORRESPONDANCE OF SIGNALS .....	24
HOW TO START .....	26
PERIPHERAL DEVICES SOFTWARE DESCRIPTION .....	36
RELAYS OUTPUTS .....	36
SERIAL LINE .....	36
I <sup>2</sup> C BUS .....	36
OPTOCOUPLED INPUTS .....	38
DIGITAL TTL I/O .....	38
APPENDIX A: ALPHABETICAL INDEX .....	A-1

# FIGURE INDEX

FIGURE 1: POSITION OF CARD RELEASE OF GMM 5115 AND GMB HR84 .....	3
FIGURE 2: BLOCKS DIAGRAM .....	5
FIGURE 3: SNAPSHOT OF GMB HR84 AND MINI MODULE GMM 5115 .....	7
FIGURE 4: CN5 - POWER SUPPLY CONNECTOR .....	12
FIGURE 5: CN3 - I <sup>2</sup> C BUS LINE CONNECTOR .....	13
FIGURE 6: I <sup>2</sup> C BUS CONNECTION DIAGRAM.....	13
FIGURE 7: CN2 - SERIAL LINE CONNECTOR .....	14
FIGURE 8: SERIAL COMMUNICATION BLOCK DIAGRAM.....	15
FIGURE 9: RS 232 PC POINT TO POINT CONNECTION EXAMPLE .....	15
FIGURE 10: CN6 - OPTOCOUPLED DIGITAL INPUTS CONNECTOR .....	16
FIGURE 11: OPTOCOUPLED INPUTS BLOCK DIAGRAM.....	17
FIGURE 12: OPTOCOUPLED INPUTS CONNECTION DIAGRAM .....	17
FIGURE 13: CN1 - RELAYS OUTPUTS CONNECTOR GROUPS A AND B .....	18
FIGURE 14: RELAY OUTPUTS A AND B BLOCK DIAGRAM.....	19
FIGURE 15: RELAY OUTPUTS A AND B CONNECTION DIAGRAM .....	19
FIGURE 16: CN4 - TTL I/O, D/A, ETC. CONNECTOR .....	20
FIGURE 17: LEDs, CONNECTORS, ETC. LOCATION .....	23
FIGURE 18: JUMPERS CONNECTION .....	24
FIGURE 19: TABLE OF CORRESPONDANCE BETWEEN SIGNALS AND RESOURCES .....	25
FIGURE 20: PICTURE OF POWER SUPPLY EXPS-2 .....	26
FIGURE 21: EXAMPLES TABLES .....	27
FIGURE 22: FLIP SETTINGS WINDOW (1 OF 3) .....	28
FIGURE 23: FLIP SETTINGS WINDOWS (2 OF 3) .....	29
FIGURE 24: FLIP SETTINGS WINDOWS (3 OF 3) .....	29
FIGURE 25: LOADING A SOURCE FILE WITH BASCOM 8051 .....	31
FIGURE 26: CONFIGURATION OF COMPILER BASCOM 8051 .....	31
FIGURE 27: COMPILATION WITH BASCOM 8051 .....	32
FIGURE 28: LOADING SOURCE FILE WITH $\mu$ C/51 .....	32
FIGURE 29: LOADING MAKEFILE (COMPILING CONFIGURATION) WITH $\mu$ C/51 .....	33
FIGURE 30: COMPILATION USING $\mu$ C/51 .....	33
FIGURE 31: LOADING SOURCE SCHEMATIC WITH LADDER WORK .....	34
FIGURE 32: COMPILER CONFIGURATION FOR LADDER WORK .....	34
FIGURE 33: COMPILATION WITH LADDER WORK .....	35
FIGURE 34: CONNECTIONS EXAMPLE .....	37

## INTRODUCTION

The use of these devices has turned - IN EXCLUSIVE WAY - to specialized personnel. This device is not a **safe component** as defined in directive **98-37/CE**.



Pins of Mini Module are not provided with any kind of ESD protection. They are connected directly to their respective pins of microcontroller. Mini Module is affected by electrostatic discharges. Personnel who handles Mini Modules is invited to take all necessary precautions to avoid possible damages caused by electrostatic discharges.

The purpose of this handbook is to give the necessary information to the cognizant and sure use of the products. They are the result of a continual and systematic elaboration of data and technical tests saved and validated from the manufacturer, related to the inside modes of certainty and quality of the information.

The reported data are destined- IN EXCLUSIVE WAY- to specialized users, that can interact with the devices in safety conditions for the persons, for the machine and for the environment, impersonating an elementary diagnostic of breakdowns and of malfunction conditions by performing simple functional verify operations , in the height respect of the actual safety and health norms.

The informations for the installation, the assemblage, the dismantlement, the handling, the adjustment, the reparation and the contingent accessories, devices etc. installation are destined - and then executable - always and in exclusive way from specialized warned and educated personnel, or directly from the TECHNICAL AUTHORIZED ASSISTANCE, in the height respect of the manufacturer recommendations and the actual safety and health norms.

The devices can't be used outside a box. The user must always insert the cards in a container that respect the actual safety normative. The protection of this container is not threshold to the only atmospheric agents, but specially to mechanic, electric, magnetic, etc. ones.

To be on good terms with the products, is necessary guarantee legibility and conservation of the manual, also for future references. In case of deterioration or more easily for technical updates, consult the AUTHORIZED TECHNICAL ASSISTANCE directly.

To prevent problems during card utilization, it is a good practice to read carefully all the informations of this manual. After this reading, the user can use the general index and the alphabetical index, respectly at the begining and at the end of the manual, to find information in a faster and more easy way.



CARD VERSION

The present handbook is reported to the **GMB HR84** card release **220503** and **GMM 5115** card release **121002**. The validity of the bring informations is subordinate to the number of the card release.

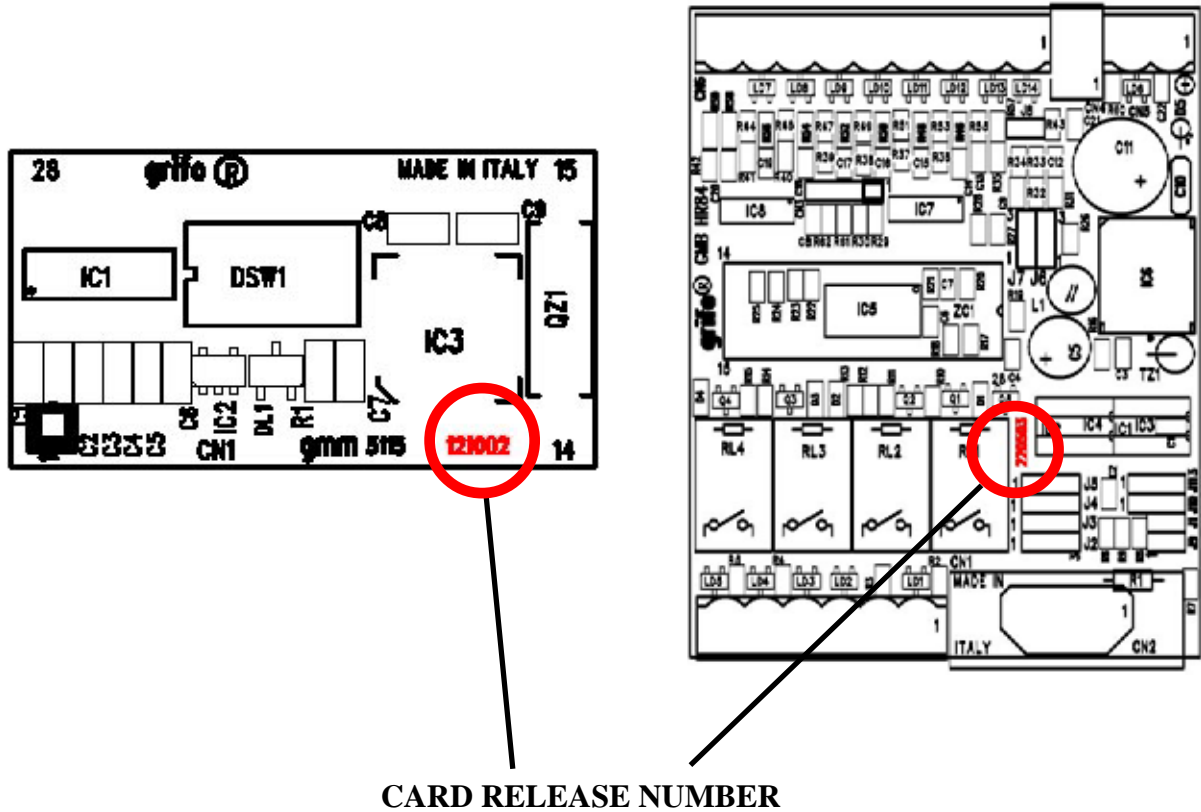


FIGURE 1: POSITION OF CARD RELEASE OF GMM 5115 AND GMB HR84

## GENERAL INFORMATION

**GMB HR84 & GMM 5115** is a module for DIN rail with a **grifo**<sup>®</sup> Mini Module CPU type **GMM 5115** already installed.

The board features 8 galvanically isolated inputs and 4 relays outputs with LEDs visualizations; an asynchronous serial line; an I<sup>2</sup>C BUS serial line; a PWM output; up to 3 I/O TTL. Its rank is low cost controller, that can work as intelligent peripheral in autonomy and/or remoted inside a wider telecontrol/teleacquisition network.

The union **GMB HR84 & GMM 5115** is provided with a standard plastic container with clamps for common Omega rails that can be found in any electric panel.

Low cost of this interface and CPU Mini Modules allow to build with great profit a serie of low budget automation systems.

It is possible to create complete applications in astonishing short times and mininum costs by taking advantage of wide variety of software development tools, like **BASCOM 8051**, unexpensive and portable, C compilers **μC/51** and **HTC 51**, or Ladder WORK, a **LADDER** compiler all available from **grifo**<sup>®</sup>.

The union is provided with a set of comfortable connectors that can be easily linked to the signals of the field without any additional module, so there is no additional cost.

Such connectors easy also update and assistance phases, that can be needed in time.

Overall features of union **GMB HR84 & GMM 5115** are:

- Modular plastic Container **DIN 50022 Modulbox**, model **M4 HC53**
- Size: front **90 x 71** mm, height **58** mm
- Mounting on **Omega** rail DIN 46277-1 and DIN 46277-3
- **GMM 5115** already installed on the 28 pin socket
- **8 Optocoupled Inputs** that can be both **NPN** or **PNP**
- Status of **8** inputs shown by **8 LEDs**
- Two inputs can pefrom **Interrupt** functions
- Three inputs can perform **Counter** functions
- **4 Relay Outputs 5 A**
- Status of 4 outputs shown by **4 LEDs**
- Four outputs can perfrom automatic timing functions
- **Serial Line** in RS 232, RS 422, RS 485, current loop or TTL
- All signals can be connected through connectors featuring **Normalized** pin out
- **3 I/O TTL** signals
- **I<sup>2</sup>C BUS** availabe on connector for external devices
- **Switching** power supply on board; protection of on board logic, through **TransZorb**
- Power supply in **DC** or in **AC**: 10 ÷ 40 Vdc or 8÷24 Vac for logic supply
- Possibility to manage internal FLASH and EEPROM in **In System Programming** mode
- Free software for PC, downloadable from ATMEL web site, to support **ISP** programming upload the generated code into on-board FLASH memory
- Wide range of development software available: C compilers (**μC/51**); BASIC compilers (**BASCOM 8051**); LADDER compilers (**LadderWORK**); etc.
- Several demo programs and use examples provided as source code completely commented available for every development structure

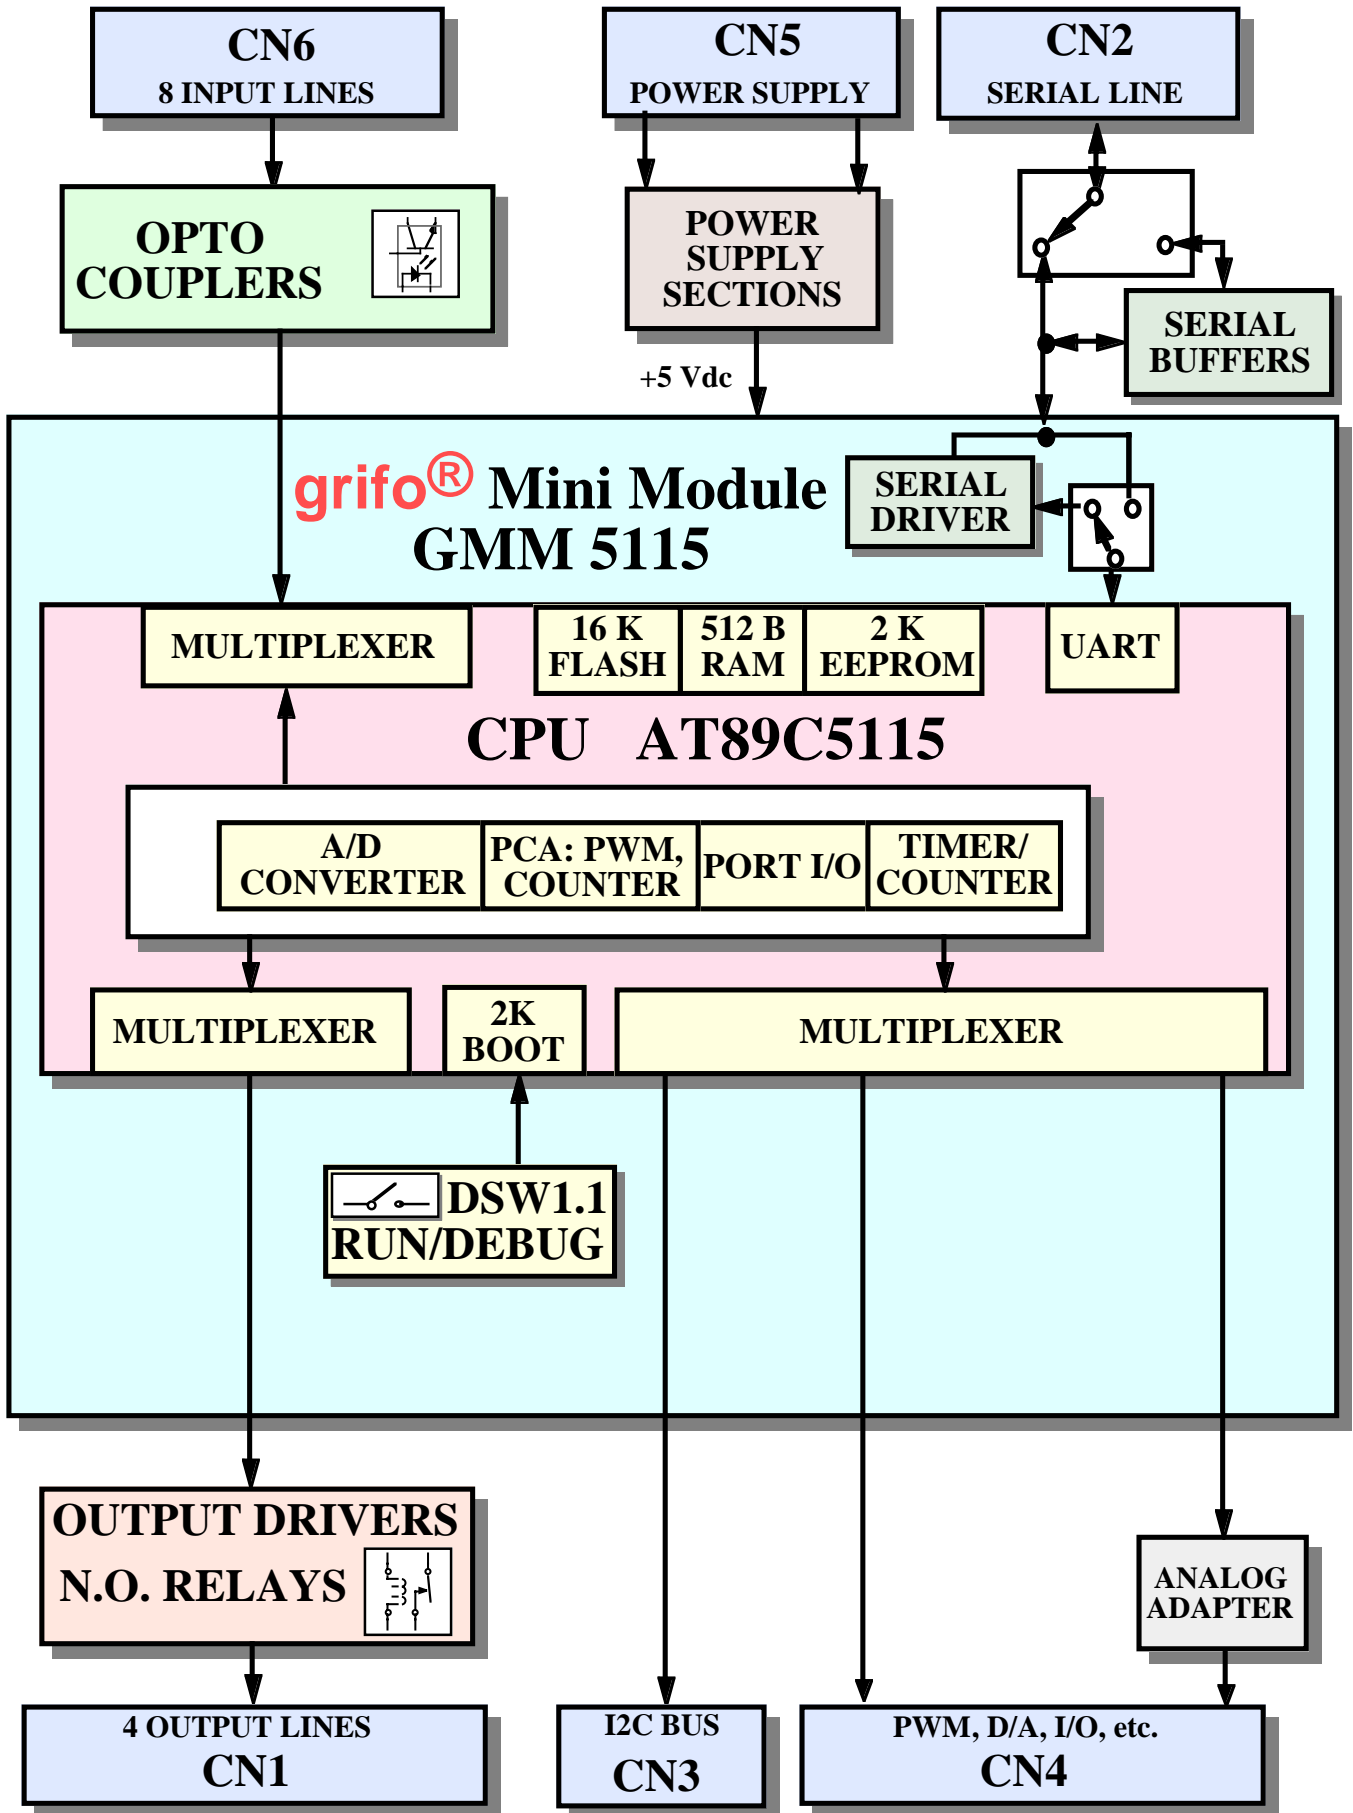


FIGURE 2: BLOCKS DIAGRAM

Here follows a description of the board's functional blocks, with an indication of the operations performed by each one.

To easily locate such section on verify their connections please refer to figure 2.

### **OPTOCOUPLED DIGITAL INPUT LINES**

The card features 8 NPN/PNP inputs connected to two quick release screw terminal connectors and visualized by specific LEDs.

Optocoupled inputs are supplied by a specific external voltage called +Vopto that the user must provide.

For further information please refer to manual **GMB HR84**.

### **DIGITAL RELAYS OUTPUTS**

The board is provided with 4 relays outputs 5 A, normally open, whose status is visualized by 4 LEDs. Each line is driven directly by a signal of **GMM 5115**, buffered through a specific driver and connected to a comfortable quick release screw terminal connector to easy interface to the field signals.

For further information please refer to manuals **GMB HR84** and **GMM 5115**.

### **I/O TTL SIGNALS**

**GMB HR84** features up to 3 digital I/O TTL signals of **GMM 5115** connected to a specific connector (CN4).

For further information please refer to manuals **GMB HR84** and **GMM 5115**.

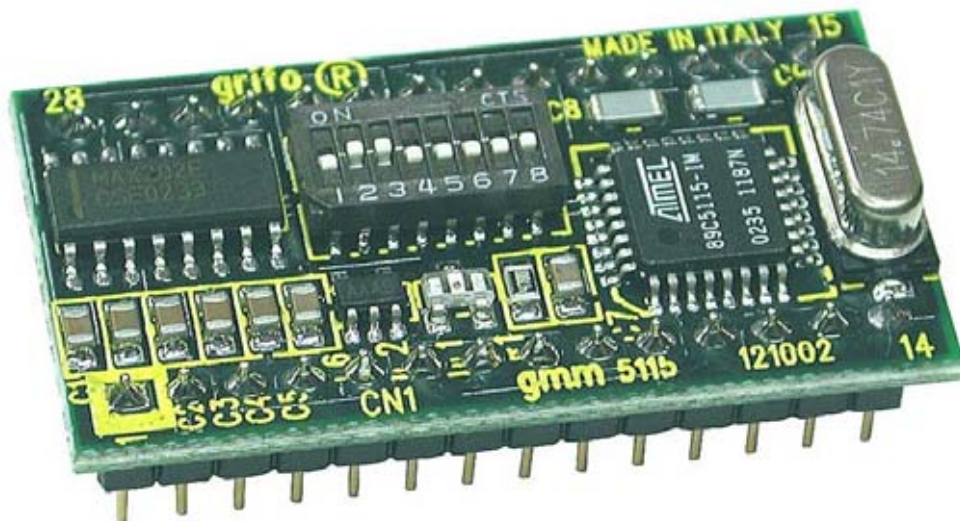


FIGURE 3: SNAPSHOT OF GMB HR84 AND MINI MODULE GMM 5115

## I<sup>2</sup>C BUS LINES

**GMB HR84** is provided with one connector (CN3) dedicated to I<sup>2</sup>C BUS, software emulated, connected to two signals of **GMM 5115** (P2.0 and P2.1), each provided with a 4.7 k $\Omega$  pull-up. This kind of interface allows to connect devices featuring the same communication standard, to easily improve the system performances.

A wide set of software examples explains the management of most common I<sup>2</sup>C BUS peripherals like A/D and D/A converters, display drivers, memories, temperature sensors, etc.

For this purpose it can be interesting to consider **K51-AVR**, for which both technical manual and electric diagram are available, also a wide set of examples in several languages are available.

For further information please refer to manuals **GMB HR84** and **GMM 5115**.

## POWER SUPPLY SECTION

**GMB HR84** is provided with an efficient switching power supply section, that provides supply +5 Vdc voltage needed by logic and output circuits, in any condition of input load and voltage.

If this section is not present, supply voltages must be provided from an external source.

The board features components and circuits designed to reduce consumptions (including the possibility of power-down and idle working modes of Mini Modules) and to reduce noise sensibility. Remarkable is protection circuit based on TransZorb™ that avoids damages due to incorrect voltages.

To supply optocouplers of galvanically isolated sections an external voltage is needed.

For further information please refer to chapter "ELECTRIC FEATURES" and paragraph "SUPPLY VOLTAGES".

## SERIAL COMMUNICATION

**GMB HR84** features one 9 ways D-type dedicated connector (CN2) for serial communication. By hardware it is possible to select the electric protocol, through a comfortable set of jumpers and drivers to install.

In detail line can be buffered in **current loop, RS 232, RS 422 or RS 485**; in these last two cases also abilitation and direction of line can be defined using signal P1.3 and jumper J7 connected in position 2-3.

For further information please refer to manuals **GMB HR84** and **GMM 5115**.

## TECHNICAL FEATURES

### GENERAL FEATURES

**On board resources:**

- 8 optocoupled digital inputs NPN and PNP
- 2 optocoupled digital inputs NPN and PNP are interrupts
- 2 optocoupled digital inputs NPN and PNP are counters
- 4 relays digital buffered outputs 5 A
- 1 serial line (RS 232, TTL, RS422, RS485, Current Loop, etc.)
- 1 connector for I<sup>2</sup>C BUS lines
- 1 eight bit PWM output
- Up to 3 digital I/O TTL
- 1 switching power supply section
- 14 status LEDs + 1 internal LED
- 1 internal eight pin Dip Switch

**Mini Module:** **GMM 5115**

**Opto input cut-off frequency:** 13 KHz

### PHYSICAL FEATURES

**Size:** 90 x 71 x 58 mm (container DIN 50022)  
85 x 66 x 32 mm (without container)

**Container:** DIN 50022 modulbox, model M4 HC53

**Montaggio:** On  $\Omega$  rails type DIN 46277-1 and DIN 46277-3

**Weight:** 171 g

**Connectors:**

- CN1: 6 pins quick release screw terminal connector
- CN2: 9 pins D type female, vertical, connector
- CN3: 4 pins strip, male, vertical
- CN4: 2x4 vie AMP MODU II, male, vertical
- CN5: 2 pins quick release screw terminal connector
- CN6: 9 pins quick release screw terminal connector

**Temperature range:** from 0 to 50 centigrad degrees

**Relative humidity:** 20% up to 90% (without condense)

## ELECTRIC FEATURES

<b>Power supply:</b>	10÷40 Vdc or 8÷24 Vac	(control logic)
<b>Power required for logic:</b>	2.3 W	(*)
<b>Output power supply:</b>	+5 Vdc	
<b>Current required by GMB HR84:</b>	310 mA max	(+5 Vdc)
	16÷75 mA max	(+V opto)
<b>Current on +5 Vdc output:</b>	400 mA - 310 mA - 21 mA = 69 mA	
<b>Relays max voltage:</b>	35 Vdc	
<b>Relays max non inductive current:</b>	5 A	(resistive load)
<b>On board battery:</b>	3.0 Vdc; 180 mAh	
<b>Backup current:</b>	2.3 µA	
<b>Optocouplers input voltage:</b>	+V opto = 8 ÷ 30 Vdc	(*)
<b>Power required for optocouplers:</b>	4.4 W	
<b>Analog input range:</b>	0÷2.5; 0÷10 V	
<b>Analog input impedance:</b>	4.7 kΩ	
<b>Pull-up on I<sup>2</sup>C BUS dedicated lines:</b>	4.7 kΩ	
<b>Termination network RS 422-485:</b>	Line termination resistor	=120 Ω
	Positive pull up resistor	=3.3 KΩ
	Negative pull down resistor	=3.3 KΩ

(\*) The data are referred to 20 C° work temperature (for further information please refer to chapter "POWER SUPPLY VOLTAGE").

## INSTALLATION


In this chapter there are the information for a right installation and correct use of the card. The user can find the location and functions of each connector, LEDs, jumper, etc. and some explanatory diagrams.

### CONNECTIONS

Module **GMBHR84 & GMM 5115** has 6 connectors that can be linkeded to other devices or directly to the field, according to system requirements. In this paragraph there are connectors pin out, a short signals description (including the signals direction) and connectors location (see figure 17).

#### **CN5 - POWER SUPPLY CONNECTOR**

CN5 is a 2 ways, quick release screw terminal connector, vertical, 5.00 mm pitch. CN5 allows to provide power needed by the switching power supply to generate logic control and optocouplers supply voltage.

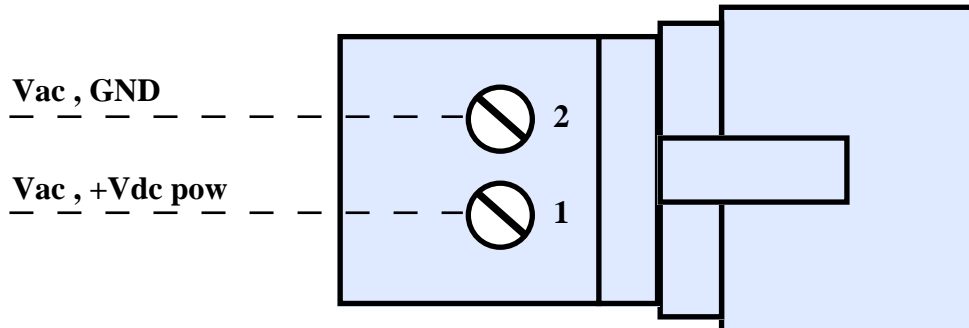

**FIGURE 4: CN5 - POWER SUPPLY CONNECTOR**

Signals description:

**Vac , +Vdc pow** = I - Positive terminal of direct supply voltage.  
**Vac , GND** = I - Negative terminal of direct supply voltage.

For further information please refer to paragraphs "POWER SUPPLY" and "ELECTRIC FEATURES".

### CN3 - I<sup>2</sup>C BUS LINE CONNECTOR

CN3 is a 4 ways, male, vertical, strip connector with 2.54mm pitch.

On CN3 is available a standard interface for any I<sup>2</sup>C BUS peripheral device.

The connector features +5 Vdc supply voltage generated by on board switching power supply that can be connected to external devices or systems.

Signals are TTL compliant, according to I<sup>2</sup>C BUS standard, their disposition has been designed to reduce interferences and so easy the connection.

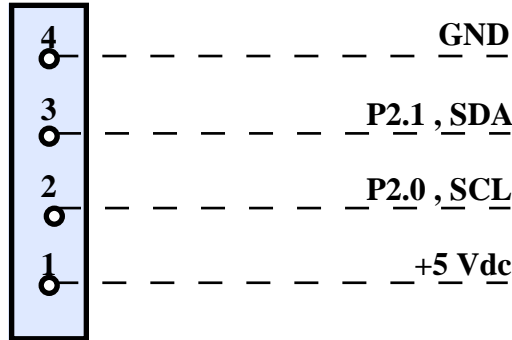


FIGURE 5: CN3 - I<sup>2</sup>C BUS LINE CONNECTOR

Signals description:

- P2.1, SDA** = I/O - Data signal of I<sup>2</sup>C BUS software serial line connected to P2.1.
- P2.0, SCL** = O - Clock signal of I<sup>2</sup>C BUS software serial line connected to P2.0.
- +5 Vdc** = O - Unique +5 Vdc power supply.
- GND** = - Ground.

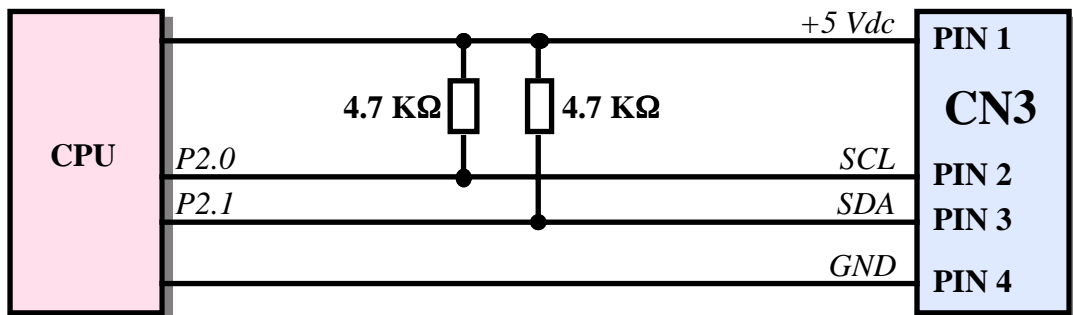


FIGURE 6: I<sup>2</sup>C BUS CONNECTION DIAGRAM

## CN2 - SERIAL LINE CONNECTOR

CN2 is a 9 ways, female, vertical, D-type type connector.

This connector features signals for serial communication in RS 232, RS 422, RS 485, current loop and TTL, performed through hardware module on ZC1 hardware serial port.

Signals position, reported as follows, has been designed to reduce interferences and easy connections to the field, while signals are compliant to CCITT standard of protocol used.

For further information please refer to figure 8 or to the manuals of **GMB HR84** and **GMM 5115**.

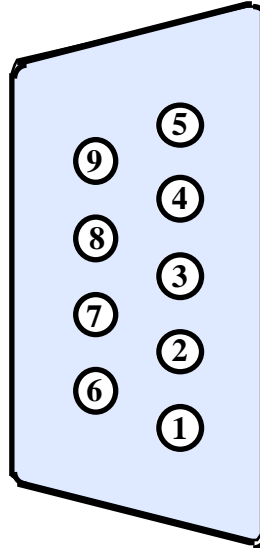


FIGURE 7: CN2 - SERIAL LINE CONNECTOR

<i>Pin</i>	<i>Signal</i>	<i>Direction</i>	<i>Description</i>
<u>RS 232 serial line (please see paragraph "SERIAL COMMUNICATION SELECTION"):</u>			
2	<b>RX RS232</b>	= I -	Receive Data for RS 232.
3	<b>TX RS232</b>	= O -	Transmit Data for RS 232.
5	<b>GND</b>	= -	Ground signal.
<u>RS 422 serial line (please see paragraph "SERIAL COMMUNICATION SELECTION"):</u>			
1	<b>RX- RS422</b>	= I -	Receive Data Negative for RS 422.
2	<b>RX+ RS422</b>	= I -	Receive Data Positive for RS 422.
3	<b>TX- RS422</b>	= O -	Transmit Data Negative for RS 422.
4	<b>TX+ RS422</b>	= O -	Transmit Data Positive for RS 422.
5	<b>GND</b>	= -	Ground signal.
<u>RS 485 serial line (please see paragraph "SERIAL COMMUNICATION SELECTION"):</u>			
1	<b>RXTX+ RS485</b>	= I/O-	Receive/Trasmit Data Positive for RS 485.
2	<b>RXTX- RS485</b>	= I/O-	Receive/Trasmit Data Negative for RS 485.
5	<b>GND</b>	= -	Ground signal.
<u>Current Loop serial line (please see paragraph "SERIAL COMMUNICATION SELECTION"):</u>			
9	<b>RX- C.L.</b>	= I -	Receive Data Negative for Current Loop.
8	<b>RX+ C.L.</b>	= I -	Receive Data Positive for Current Loop.
7	<b>TX- C.L.</b>	= O -	Transmit Data Negative for Current Loop.
6	<b>TX+ C.L.</b>	= O -	Transmit Data Positive for Current Loop.
5	<b>GND</b>	= -	Ground signal.

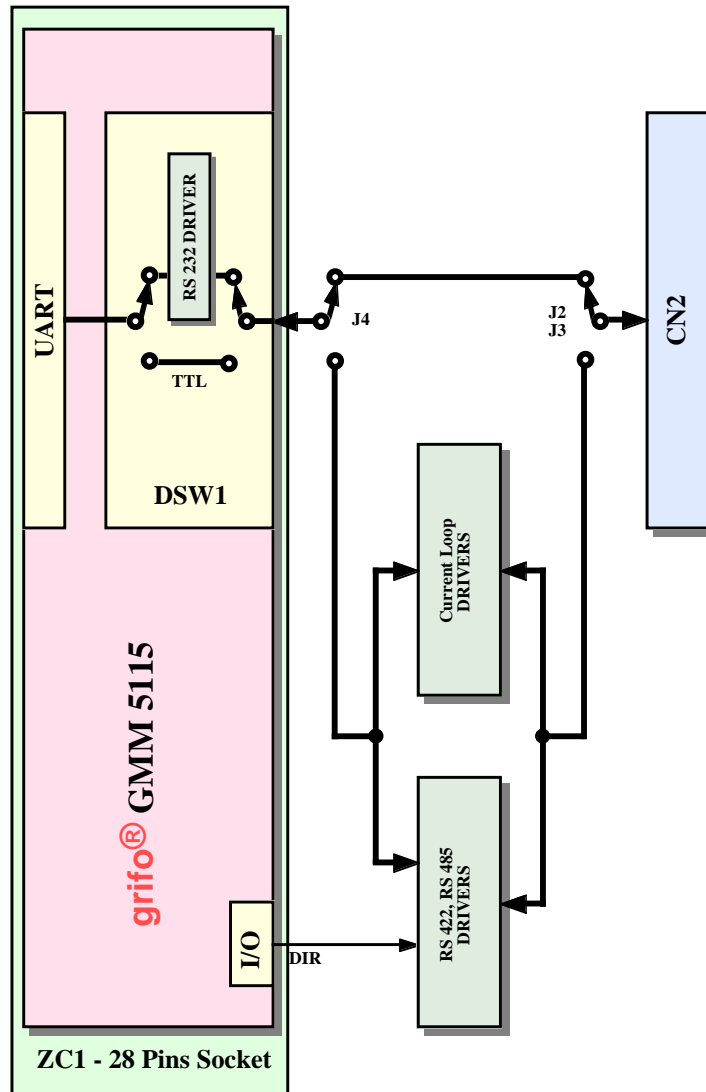


FIGURE 8: SERIAL COMMUNICATION BLOCK DIAGRAM

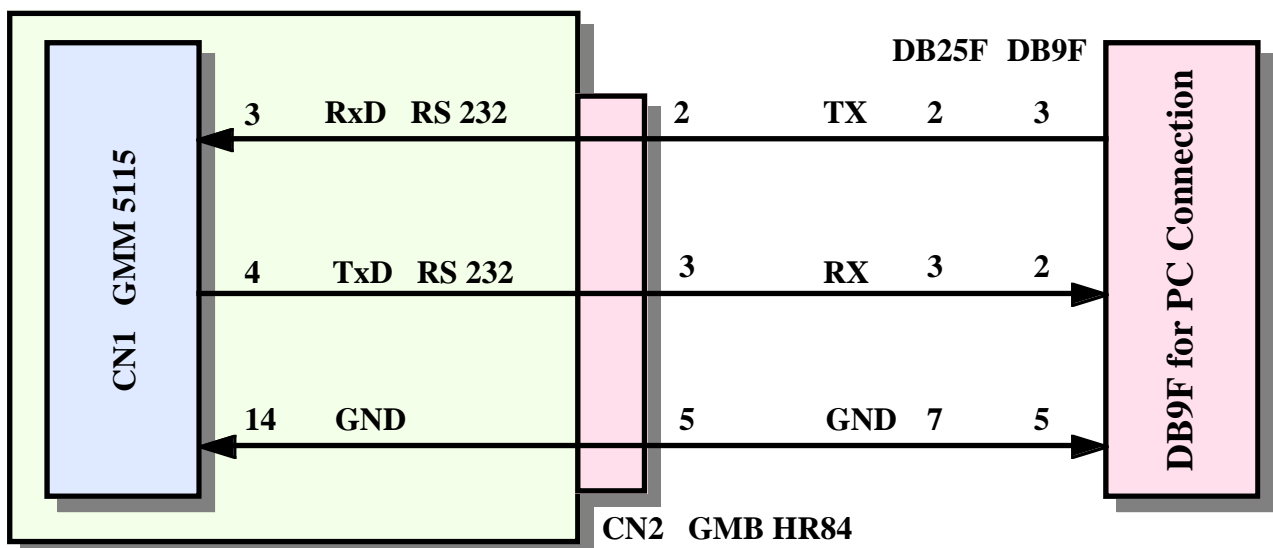


FIGURE 9: RS 232 PC POINT TO POINT CONNECTION EXAMPLE

### CN6 - OPTOCOUPLED DIGITAL INPUTS CONNECTOR

CN6 is a 9 ways, quick release, screw terminal connector, pitch 5.0 mm.

CN6 is used to connect the 8 optocoupled NPN or PNP input signals that the card manages and are visualized by green LEDs.

**Two** of these **inputs** (IN3 and IN4) are connected directly to **interrupt** signals, so they can generate an immediate interrupt request to the CPU.

**Two** more of these **inputs** (IN5 and IN6) are connected to the external trigger of timer/counters, so transitions on these inputs can be **counted by hardware** by CPU.

Please refer to figure 19 for further information.

Connector also features the common pin where to connect one input to close it.

These signals are software managed through **GMM 5115** I/O ports have been carefully selected to take advantage of **grifo®** Mini Modules internal peripherals.

For further information please refer to manual **GMB HR84**.

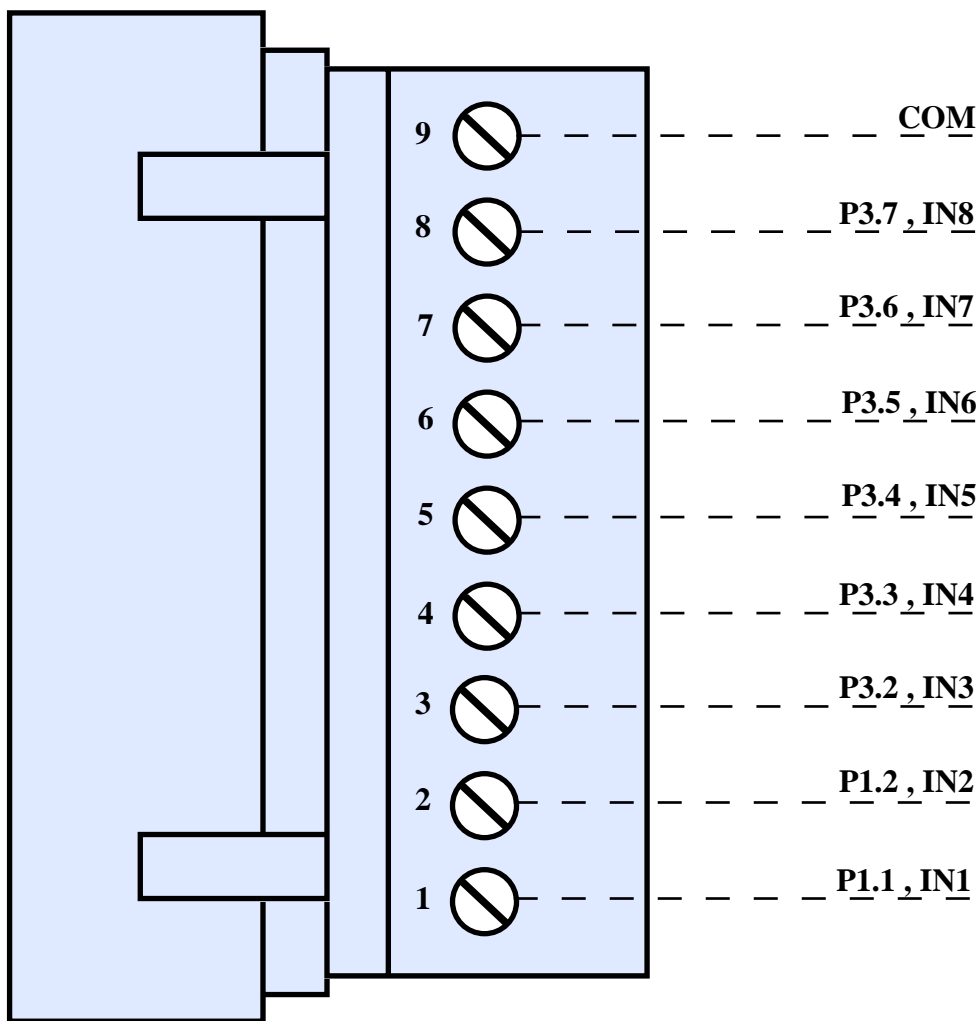


FIGURE 10: CN6 - OPTOCOUPLED DIGITAL INPUTS CONNECTOR

Signals description:

- Px.y, INn** = I - n-th optocoupled input type NPN or PNP, connected to indicated port.
- COM** = - Common pin where an input must be connected to close it.

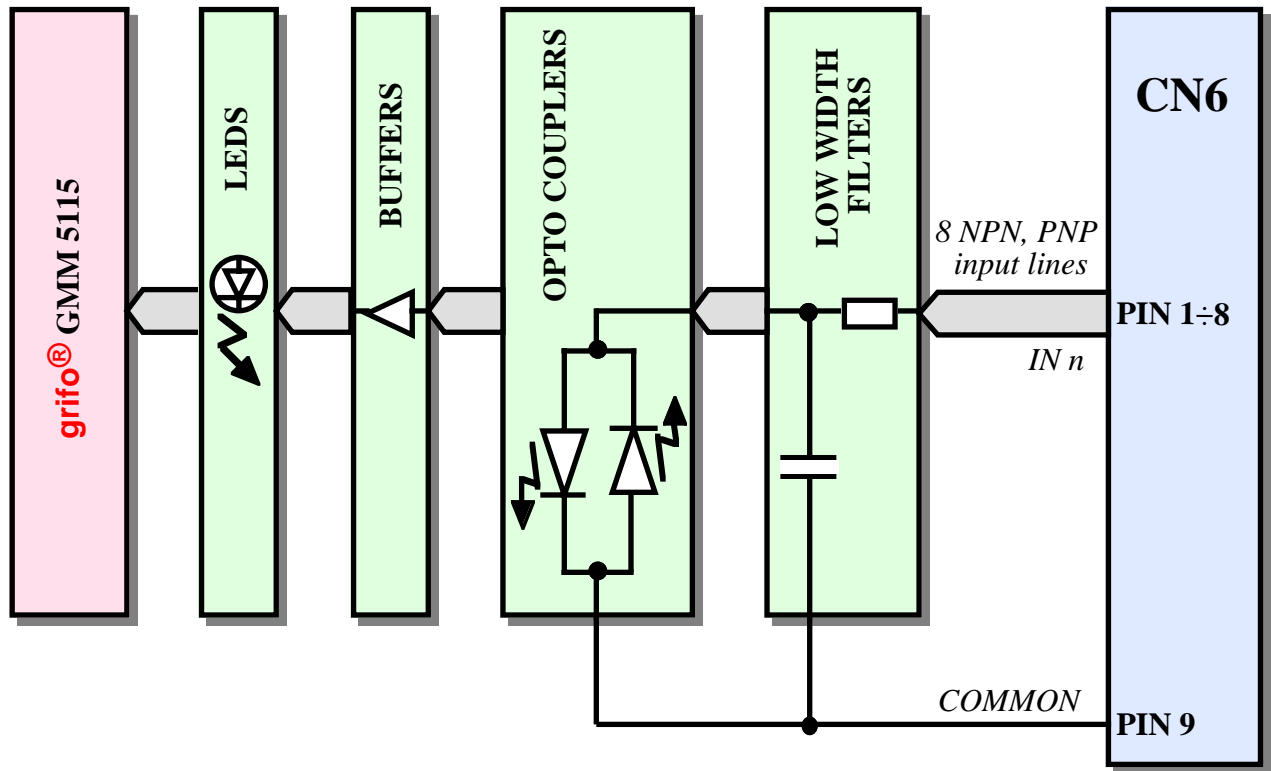


FIGURE 11: OPTOCOUPLED INPUTS BLOCK DIAGRAM

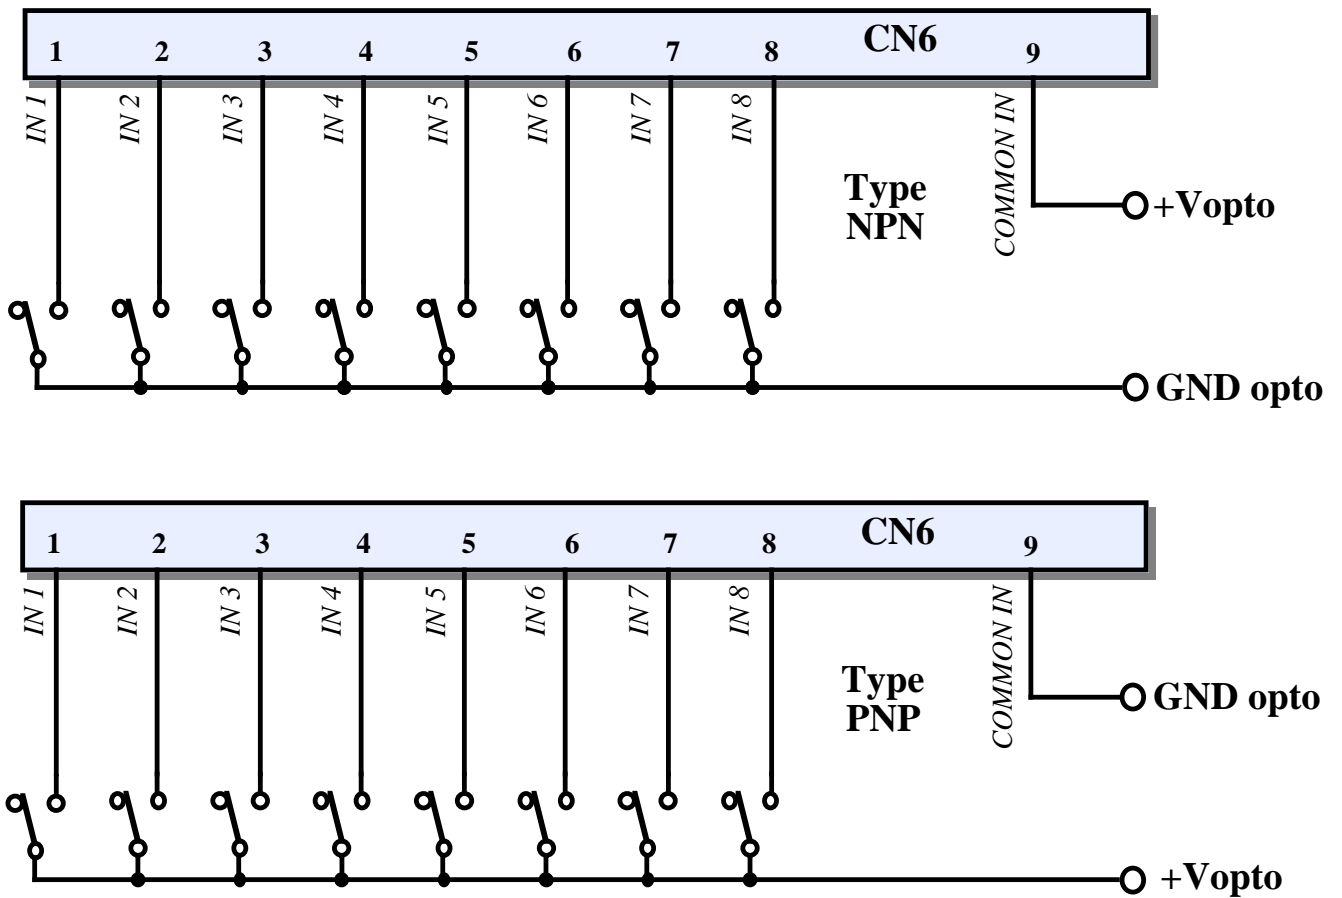


FIGURE 12: OPTOCOUPLED INPUTS CONNECTION DIAGRAM

## CN1 - RELAYS OUTPUTS CONNECTOR GROUPS A AND B

CN1 is a 6 ways, quick release screw terminal connector, pitch 5.0 mm.

This connector allows to connect 4 normally open contacts and common pins relays outputs available on **GMB HR84**.

Please remark that maximum (resistive) load for each line is **5 A** and maximum voltage is **35 Vdc**. These signals are software managed through **GMM 5115** I/O ports, opportunely buffered, and selected carefully to easy management (please refer to chapter “PERIPHERAL DEVICES SFOTWARE DESCRIPTION”).

For further information please refer to manual **GMB HR84**.

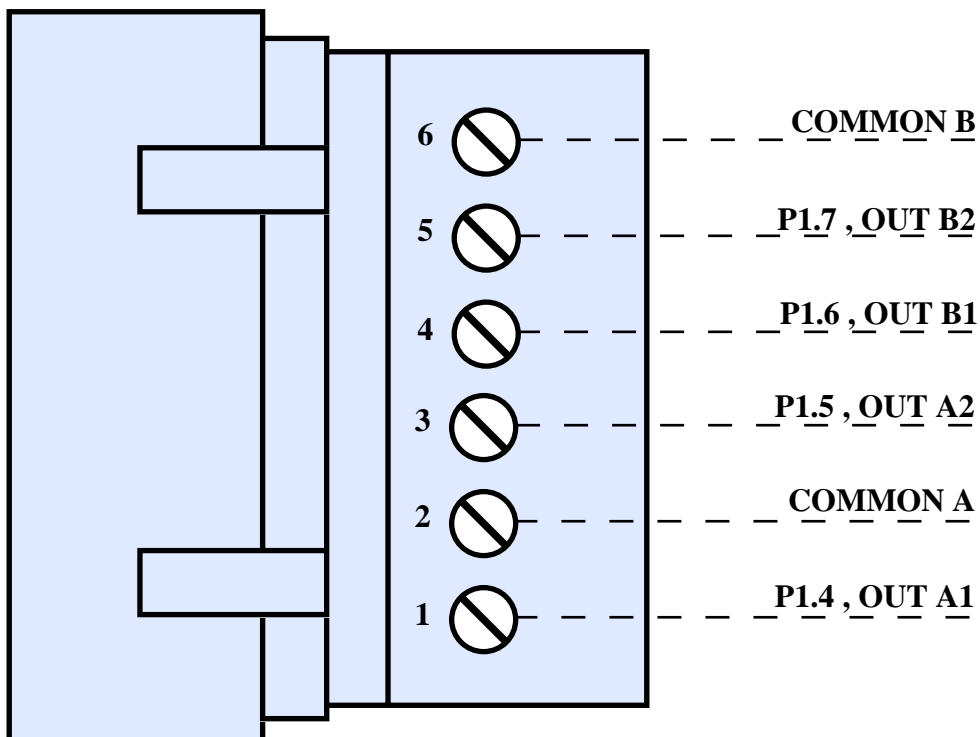


FIGURE 13: CN1 - RELAYS OUTPUTS CONNECTOR GROUPS A AND B

Signals description:

- P1.x, OUT An** = O - Normally open contact for n-th relay of group A, connected to P1.x.
- COMMON A** = - Common contact for relays of group A.
- P1.x, OUT Bn** = O - Normally open contact for n-th relay of group B, connected to P1.x.
- COMMON B** = - Common contact for relays of group B.

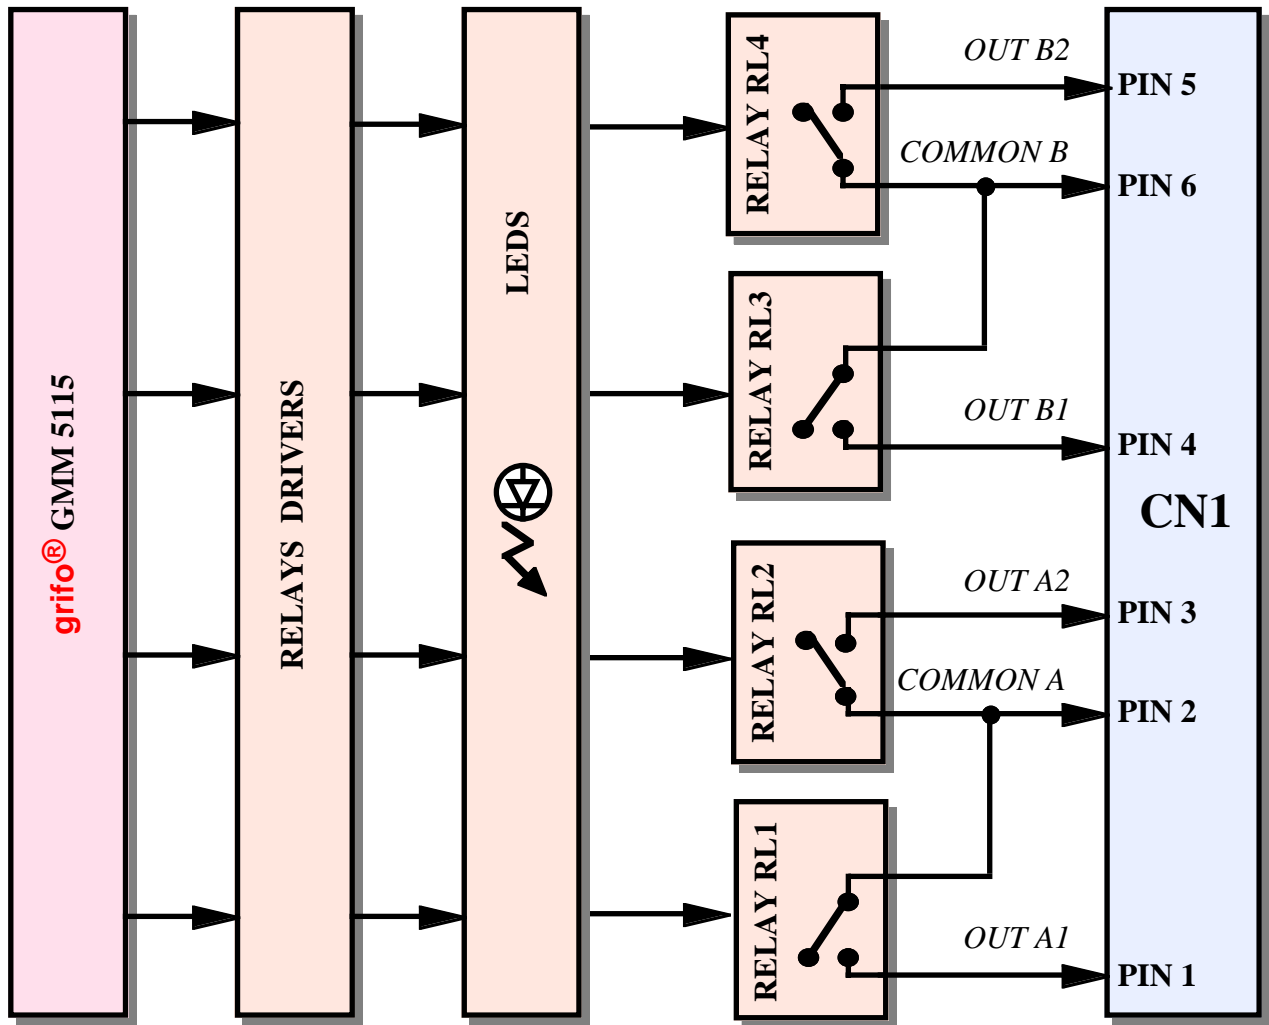


FIGURE 14: RELAY OUTPUTS A AND B BLOCK DIAGRAM

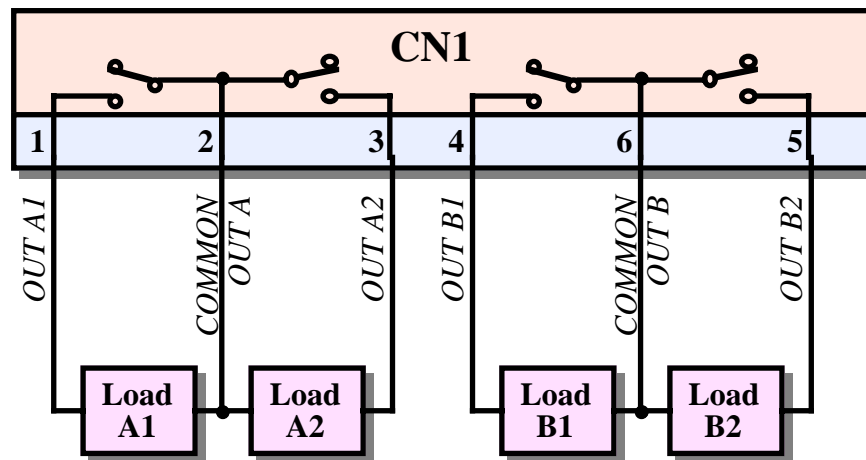


FIGURE 15: RELAY OUTPUTS A AND B CONNECTION DIAGRAM

## CN4 - TTL I/O, D/A, ETC. CONNECTOR

CN4 is a 8 ways, male, vertical, AMP MODU II 2x4 connector with pitch 2.54 mm.

This connector features +5 Vdc supply voltage (generated by on board switching power supply) and up to 3 TTL digital I/O signals.

Female connector can be ordered from **grifo**<sup>®</sup> (cod. **CKS.AMP8**) or its parts can be purchased from AMP catalog (P/N 280365: connector and P/N 182206-2: pins to crimp).

It is also possible to order the female connector with pins to crimp already mounted and one meter long cables (**grifo**<sup>®</sup> cod. **AMP8.cable**).

For further information please refer to the manual of **GMB HR84**.

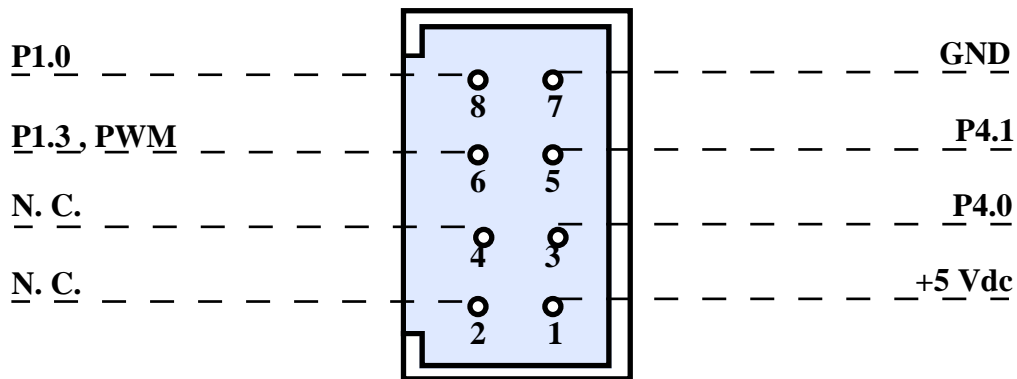


FIGURE 16: CN4 - TTL I/O, D/A, ETC. CONNECTOR

Signals description:

<b>Px.y</b>	= I/O - TTL digital I/O signal, connected to pin x of socket ZC1
<b>PWM</b>	= O - Pulse Width Modulation TTL output of Mini Module
<b>+5 Vdc</b>	= O - Positive terminal of +5 Vdc power supply.
<b>GND</b>	= - Ground signal.
<b>N. C.</b>	= - No connection.

## INTERRUPTS

Possible interrupt sources are:

- Input IN3 of CN1                   -> Generates an external interrupt called /INT0.
- Input IN4 of CN1                   -> Generates an external interrupt called /INT1.
- CPU internal peripherals       -> Generate internal interrupts. In detail interrupt sources can be:  
Timer 0, Timer 1, Timer 2, PCA, UART.

Please refer to **GMM 5115** manual for further information.

## I/O CONNECTION

To prevent possible connecting problems between **GMB HR84 & GMM 5115** and the external systems, the user has to read carefully the previous paragraph information and he must follow these instructions:

- For RS 232, RS 422, RS 485, Current Loop and I<sup>2</sup>C BUS signals the user must follow the standard rules of each one of these protocols;
- For all TTL signals the user must follow the rules of this electric standard. The connected digital signal must be always referred to card digital ground and if an electric insulation is necessary, then an opto coupled interface must be connected. For TTL signals, the 0V level corresponds to logic state 0, while 5V level corresponds to logic state 1.
- For optocoupled input signals, both the contact to acquire and external +V<sub>opto</sub> must be connected in serie. In detail, contacts must perform the following connection:

	NPN	PNP
IN x	GND opto	+V opto
COMMON	+Vopto	GND opto

to avoid problems with electric noise, it is suggestable to keep galvanically separated +V<sub>opto</sub> and board power supply, this means to keep separate board GND and GND opto.

- Relays outputs must be connected directly to the load to drive (remote control switches, power relays, etc.). Board contact is normally open and can bear **5 A** up to **35 Vdc**. To drive load with different supplies, different COMMONS for two groups of relays are available.

## POWER SUPPLY

**GMB HR84 & GMM 5115** is provided with an efficient circuitry that solves in a comfortable and efficient way the problem to supply the card in any condition of use.

Here follow the volages required by the card:

**+V opto:** Provides power supply to optocouplers of board input section; input voltage must be in the range 8÷30 Vdc and must be provided on connector CN6.

**Vac, +Vdc pow, GND:** Provide power supply to control logic and to output section of the board through the on board switching power supply; input voltage must be in the range 10 ÷ 40 Vdc or 8 ÷ 24 Vac and must be provided though pins 1 and 2 of CN5 (in case of Vdc, pin 1 must be connected to positive terminal). This allows to supply the cards using standard devices of industrial sector like transformers, batteries, solar cells, etc. Also, if there is the need to supply at +5 Vdc I<sup>2</sup>C BUS external peripherals from **GMB HR84 & GMM 5115**, pins 1 and 4 of CN3 can be used. Please remark that on board switching power supply is provided with single diode rectifier, so in case of Vdc supply, all ground signals (GND) of the card are at the same potential.

To warrant highest immunity against noise and so a correct working of the cards, it is essential that these two volages are galvanically isolated

In order to obtain this power supply **EXPS-2** can be ordered.

This device performs galvanic isolation starting from mains power supply.

**GMB HR84** features a **TransZorb™**-based protection circuit to avoid damages from incorrect tensions and break-down of power supply section.

On board power supply is visualized through a LED on the bottom left corner.

Current available to supply external loads using +5 Vdc **must be less than:**

400 mA - current absorbed by **GMB HR84** - current absorbed by Mini Module

in this case:

$$400 \text{ mA} - 310 \text{ mA} - 21 \text{ mA} = 69 \text{ mA}$$

For further information please refer to paragraph "ELECTRIC FEATURES".

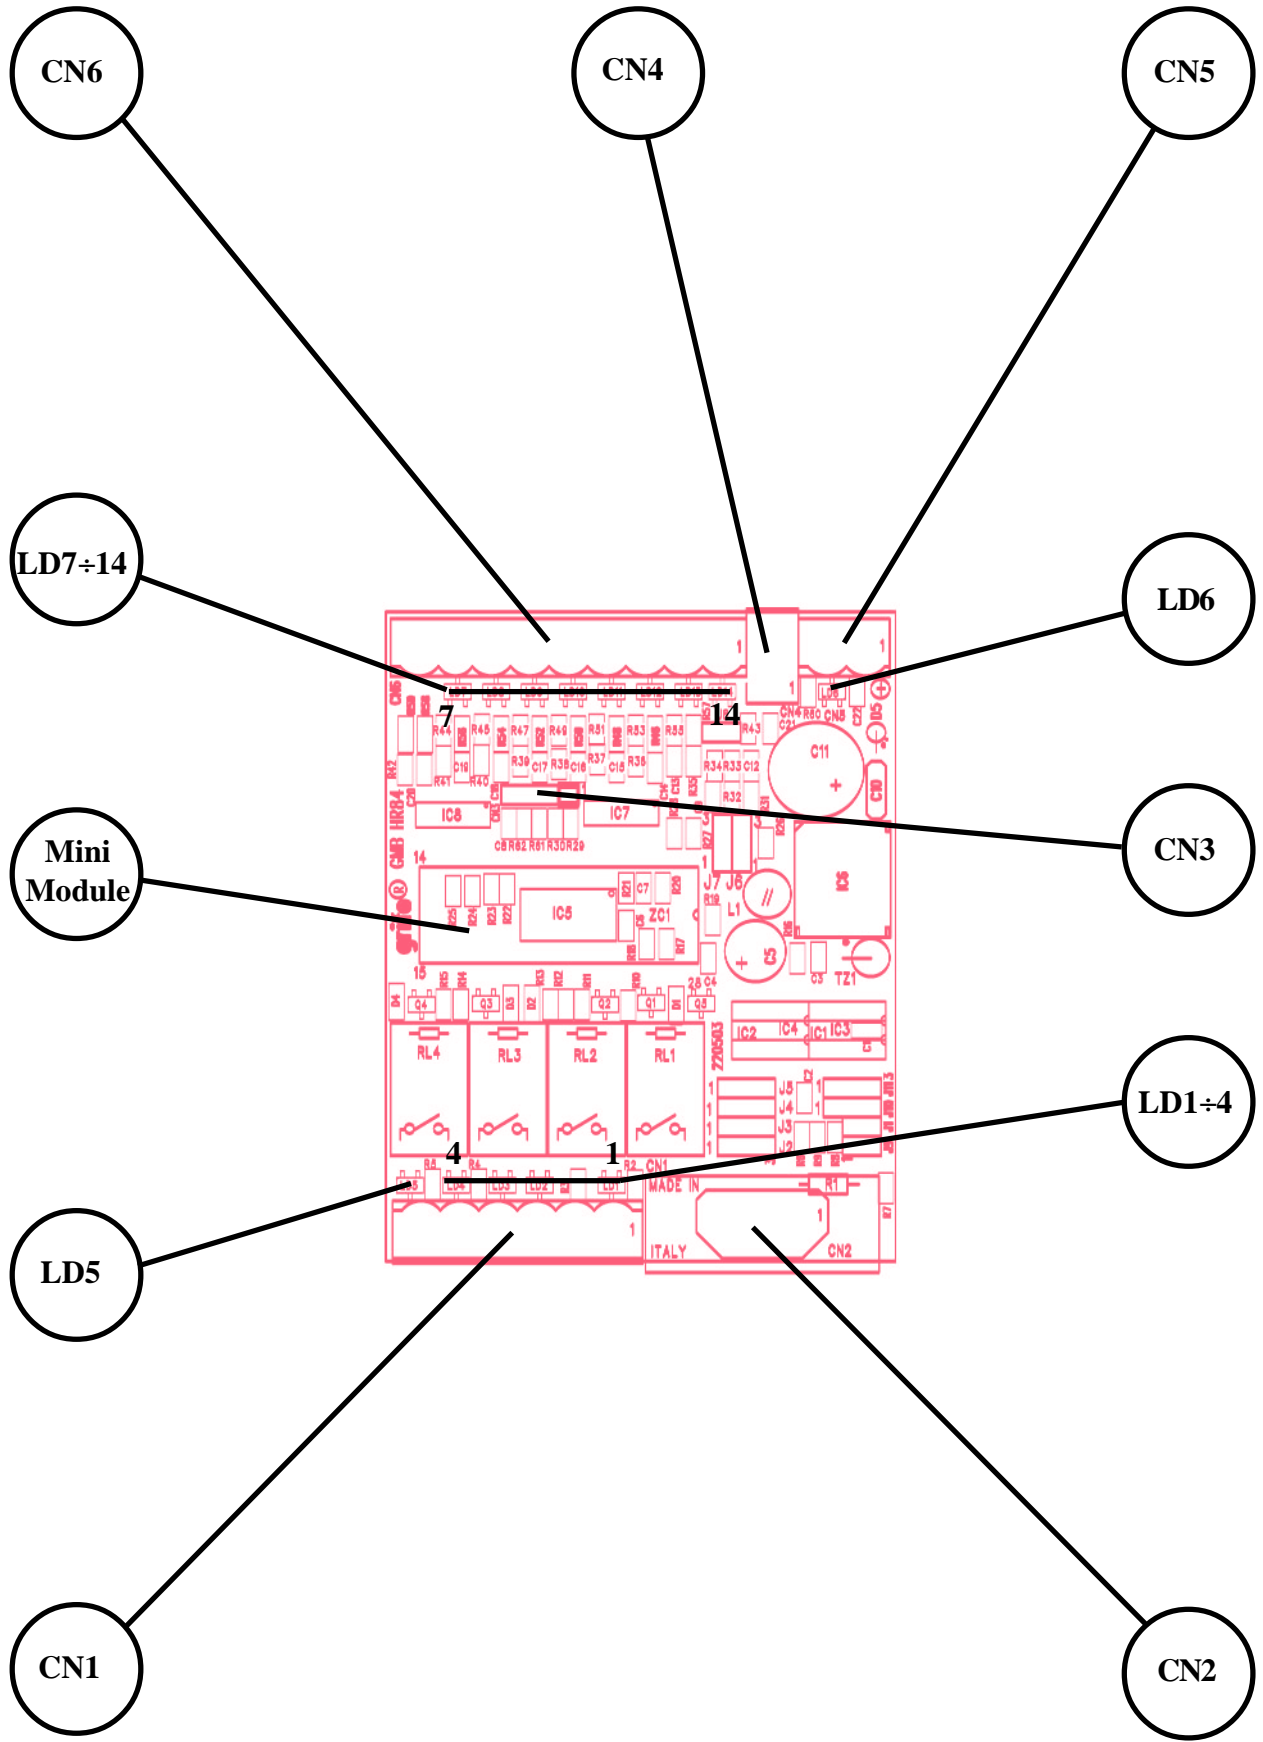



FIGURE 17: LEDs, CONNECTORS, ETC. LOCATION



**CORRESPONDANCE OF SIGNALS**

All hardware resources of **GMB HR84 & GMM 5115** are managed by **GMM 5115** through signals and peripherals of local microcontroller, Atmel AT89C5115.

To have the complete control of such resources, it is enough to refer to the table in the near page, which indicates the signal and/or peripheral that drives a specific resource.

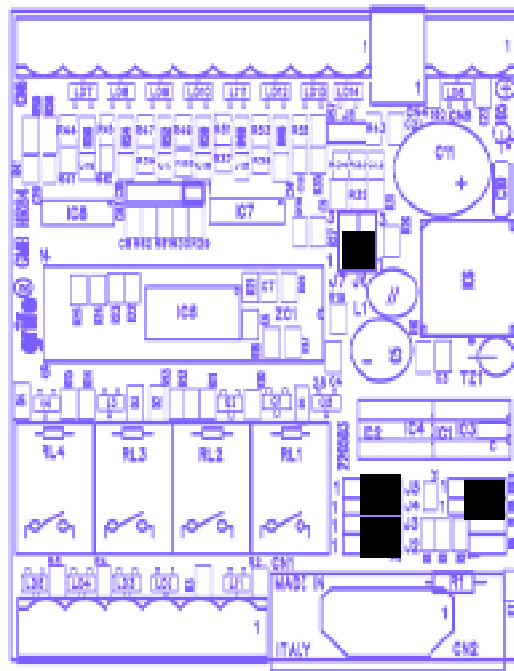

**FIGURE 18: JUMPERS CONNECTION**

Connector GMB HR84	PIN	Signal GMB HR84	PURPOSE	PIN CN1 GMM 5115	Signal GMM 5115
<b>OPTO INPUTS</b>	1	Input 1	Optocoupled input n° 1.	pin 26	P1.1
	2	Input 2	Optocoupled input n° 2 or counter PCA.	pin 25	P1.2, ECI
	3	Input 3	Optocoupled input n° 3 or Interrupt 0.	pin 19	P3.2, /INT0
	4	Input 4	Optocoupled input n° 4 or Interrupt 1.	pin 18	P3.3, /INT1
	5	Input 5	Optocoupled input n° 5 or counter Timer 0.	pin 17	P3.4, T0
	6	Input 6	Optocoupled input n° 6 or counter Timer 1.	pin 16	P3.5, T1
	7	Input 7	Optocoupled input n° 7.	pin 15	P3.6
	8	Input 8	Optocoupled input n° 8.	pin 13	P3.7
		9	Common pin of optocoupled inputs		
<b>RELAY OUTPUTS</b>	A1	Output 1	Relay output 5 A n° 1.	pin 23	P1.4
	A	Common pin of buffered relay outputs of group A on connector CN3			
	A2	Output 2	Relay output 5 A n° 2.	pin 22	P1.5
	B1	Output 3	Relay output 5 A n° 3.	pin 21	P1.6
	B	Common pin of buffered relay outputs of group B			
	B2	Output 4	Relay output 5 A n° 4.	pin 20	P1.7
<b>AMP 8 I/O</b>	pin 1	+5 Vdc	Power supply +5 Vdc.	pin 28	+5 Vdc
	pin 3	CAN L	I/O TTL.	pin 8	P4.0
	pin 5	CAN H	I/O TTL.	pin 9	P4.1
	pin 6	D/A	PWM of CEX0 or I/O TTL.	pin 24	P1.3
	pin 7	GND	Ground of Mini Block.	pin 14	GND

FIGURE 19: TABLE OF CORRESPONDANCE BETWEEN SIGNALS AND RESOURCES

## HOW TO START

One of the most important features is the possibility to program the microprocessor Atmel AT89C5115 internal FLASH through RS232 serial connecton without removing Mini Module from socket ZC1.

### A) MAKE SERIAL CONNECTION BETWEEN HARDWARE AND PC:

A1) First of all, open the container of **GMB HR84** to install Mini Module **GMM 5115** on socket ZC1.

A2) To supply **GMB HR84**, power supply **EXPS-2** can be used. It can provide two galvanicallt isolated tensions, required for the correct working of **GMB HR84 & GMM 5115**. Also any other power supply capable to generated the two required voltages can be used.



**FIGURE 20: PICTURE OF POWER SUPPLY EXPS-2**

A3) Make the connection described in figure 9.

A4) Keep ready a terminal emulatore on the PC, configure it to use the serial port conneted to the Mini Module with 19200 baud, 8 data bit, 1 stop bit, no parity.

A5) Set DEBUG mode, that is move dip switch DSW1.1 of **GMM 5115** to position ON.

A6) Supply **GMB HR84 & GMM 5115**. Please, find the demo program of **GMB HR84 & GMM 5115** on **grifo®** CD, the file is called "prgmb84.hex" and can be found from the starting following the path: English | Examples Tables | Mini Block and Mini Modules programs | GMB HR 84.

PROGRAMMI PER MINI MODULI E MINI BLOCK													
TIPO DI SCHEDA	GET	ASM	Ladder	Abaco® Link BUS	BASIC CBZ80	BASIC BASCOM 8051	BASIC BASCOM AVR	PIC BASIC	BASIC VARI	MCS® Basic 52	C	PASCAL	TIPO DI CPU / BLOCK
VARI	-	-	-	-	-	●	-	-	-	-	-	-	-
CAN GM0	●	-	-	-	-	●	-	-	-	-	●	-	Atmel T89C51cc03 - 8051 Code
CAN GM1	●	-	-	-	-	●	-	-	-	-	●	-	Atmel T89C51cc01 - 8051 Code
CAN GM2	●	-	-	-	-	●	-	-	-	-	●	-	Atmel T89C51cc02 - 8051 Code
GMM 5115	●	-	-	-	-	●	-	-	-	-	●	-	Atmel T89C5115 - 8051 Code
GMM 876	●	-	-	-	-	-	-	●	-	-	-	-	Microchip PIC16F876A - PIC 14 Code
GMM 932	●	-	-	-	-	●	-	-	-	-	-	-	PHILIPS P89LPC932 - 8051 Code
GMM AC2	●	-	-	-	-	●	-	-	-	-	●	-	Atmel T89C51AC2 - 8051 Code
GMM AM08	●	-	-	-	-	-	●	-	-	-	-	-	Atmel ATmega08 - AVR Code
GMM AM32	●	-	-	-	-	-	●	-	-	-	-	-	Atmel ATmega32 - AVR Code
GMB HR84	●	-	-	-	-	●	●	●	-	-	●	-	Mini Block 8 input opto 4 output relè
GMB HR168	●	-	-	-	-	●	-	-	-	-	●	-	Mini Block 16 input opto 8 output relè

FIGURE 21: EXAMPLES TABLES

## B) FLASH REPROGRAMMING:

- B1) Find and save to a comfortable position on your hard drive the file "prgmb84.hex".
- B2) On **grifo**® CD it is also available the utility program FLIP. that manages the ISP programming of microcontroller memories on board of **GMM 5115** through the simple serial connection seen at point A; find it and install it on a comfortable position on your hard drive. It is suggested to use version 2.2.0 or greater, the latest verion is available on Atmel website: [www.atmel.com](http://www.atmel.com).
- B3) Put switch 1 of DSW1.1 of **GMM 5115** in position ON, to set DEBUG mode.
- B4) Close the terminal emulator.
- B5) Turn off and then turn on again **GMB HR84 & GMM 5115**.
- B6) Run ISP programming software installed at step B2.
- B7) Select the CPU to program, that is AT89c5115, by pressing the first button on top left, picking the name in the window that appears and pressing OK.

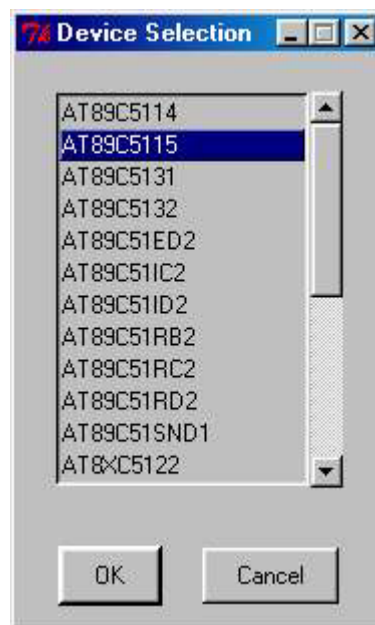


FIGURE 22: FLIP SETTINGS WINDOW (1 OF 3)

B8) Select communication speed with Mini Module by pressing the second button on the top left, picking RS 232 the 115200 and the serial port used to connect the PC to Mini Module then press OK:

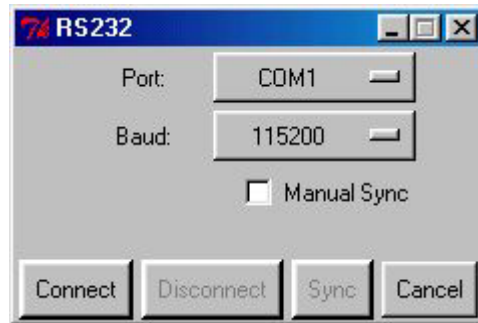


FIGURE 23: FLIP SETTINGS WINDOWS (2 OF 3)

If a window with the message "Timeout Error" should appear after 20 seconds, try to decrease the baud rate; or to repeat point from B1 to here; or verify the correct connection between PC and Mini Module repeating the points from A1 to A4.

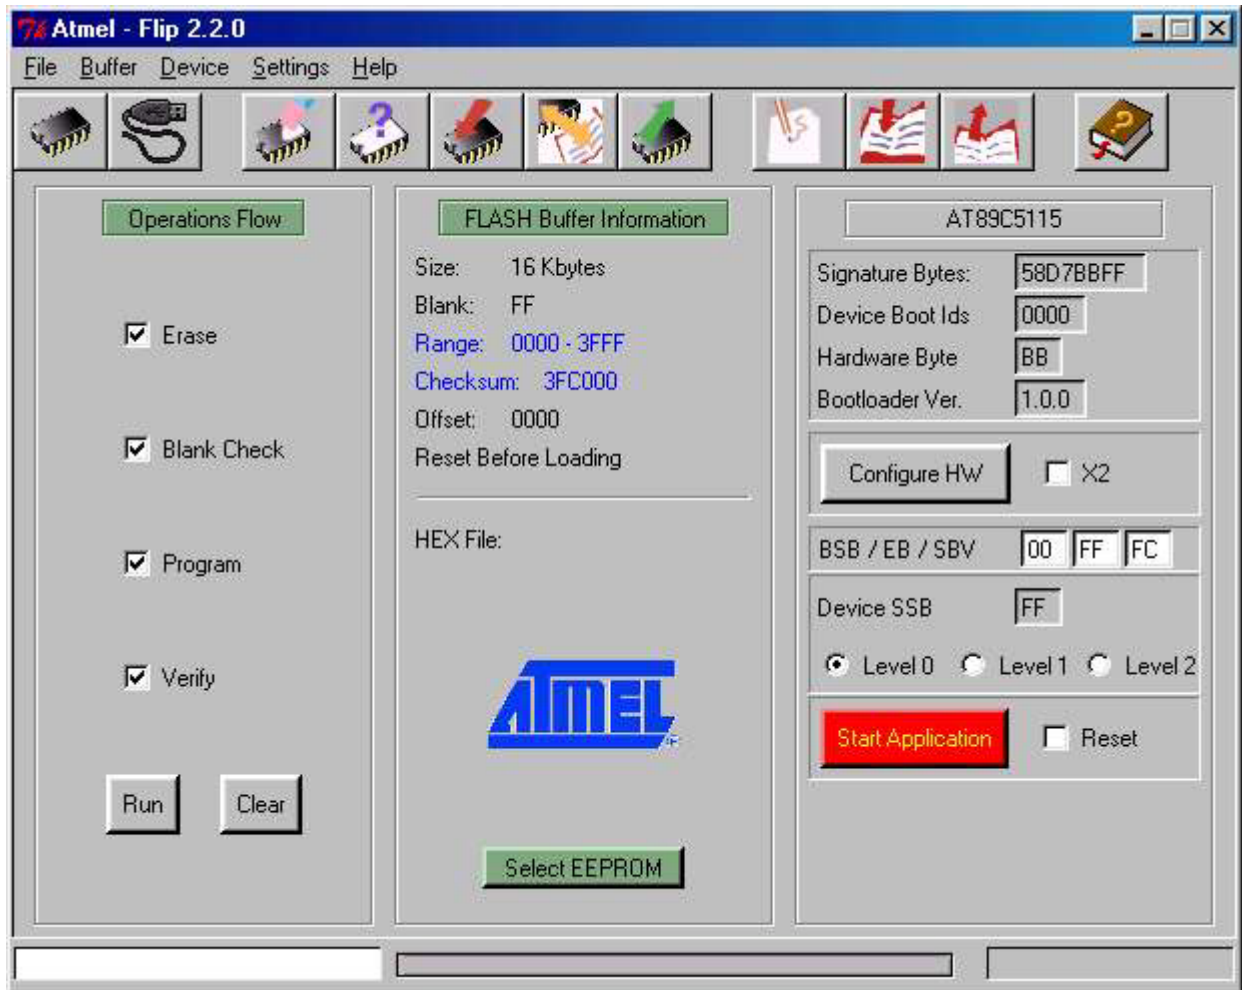


FIGURE 24: FLIP SETTINGS WINDOWS (3 OF 3)


- B9) Make sure that text boxes in the frame "AT89C5115" fill with text, like in figure 24.
- B10) Load the file to write in FLASH (that is prgmb84.hex) pressing the third button on top right and selecting the file using the dialog box. In the frame "FLASH Buffer Information" several information about the file just loaded appear; in detail the box "HEX File:" must report the file name.
- B11) Check all the check boxes in the frame "Operations Flow".
- B12) Press button "Run" in the same frame.
- B13) The status bar on the bottom reports operation progress, text box in the bottom left reports operation status, check boxes become red and then green when the respective operation is successfully completed. Wait for "Verify" check box to become red.
- B14) Close **FLIP**.
- B15) Start the terminal emulator configured like in point A4.
- B16) Set RUN mode, that is DSW1.1 OFF.
- B17) Reset or Power off and then on the card; the terminal emulation window now must show the demo program start screen, like in point A4.

### *C) GENERATING DEMO EXECUTABLE CODE:*

- C1) Install on the hard disk of the development P.C. the software environment selected to develop the application program. There are many different software tools that satisfy any customers requirements but here we remind only the most diffused as the BASCOM 8051,  $\mu$ C/51, LADDER WORK, etc.
- C2) On **grifo**<sup>®</sup> CD in addition to file with the executable code of the demo program, described at point A6, there are also the source file of the same. These have an extension that identifies the used software development tools (for example prgmb84.bas for BASCOM 8051, prgmb84.c for  $\mu$ C/51 or prgmb84.pjn for LADDER WORK) and they are properly organized inside demo programs tables available on CD, together with possible definition file (prgmb84.mak and canary.h for  $\mu$ C/51, grifo\_mm.dat for BASCOM 8051, etc.). Once these files have been located they must be copied in a comfortable folder on the hard disk of development P.C.
- C3) Compile the source file by using the selected software tools: the file prgmb84.hex must be obtained equal to those available on **grifo**<sup>®</sup> CD and already used at steps B. This operation is very different according to the programming environment selected, so here follows the details:


## I) Ricompilation using BASCOM 8051

Ia) When in BASCOM IDE, load the program source with menu File | Open:

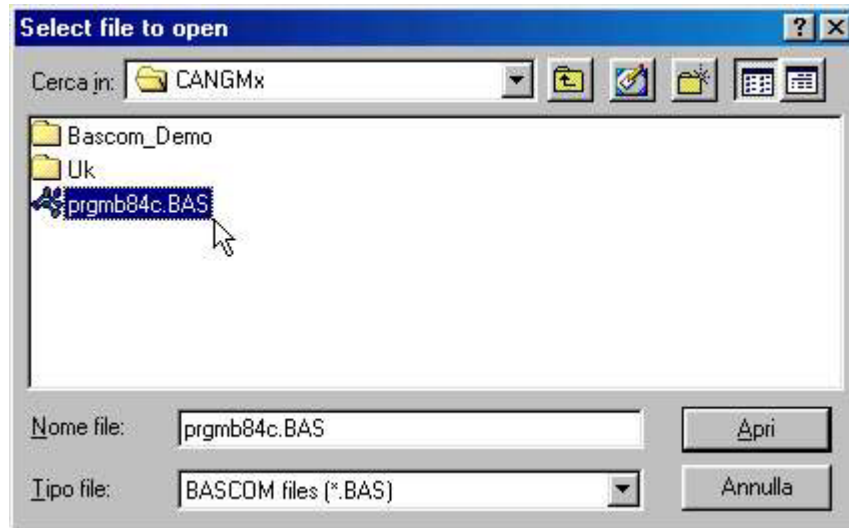

**FIGURE 25: LOADING A SOURCE FILE WITH BASCOM 8051**

Ib) From menu Options | Compiler | Misc set the value of Byte End to A0, as suggested also in the source code, and press OK:

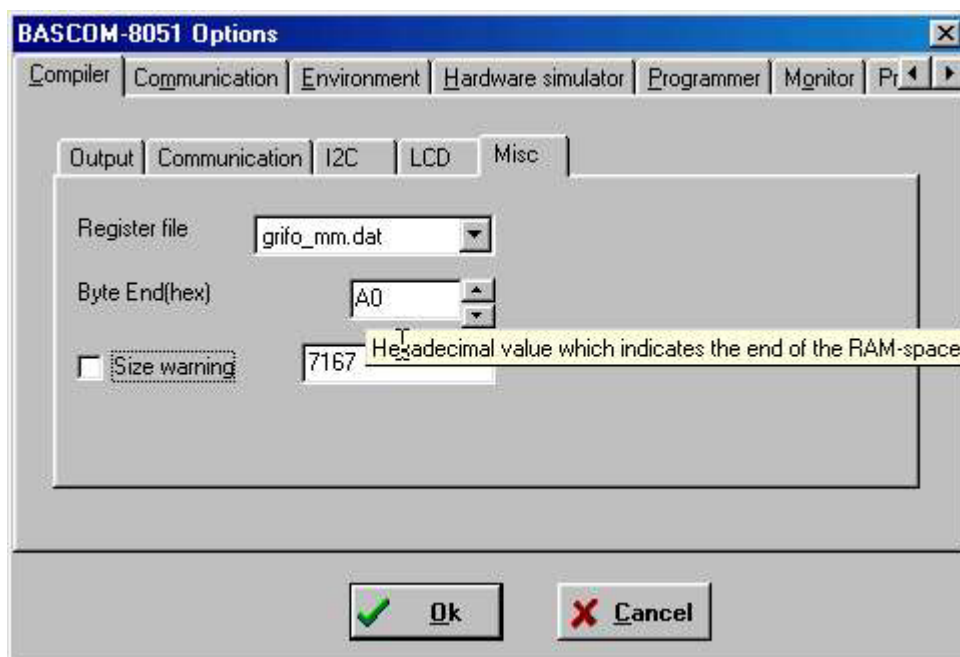

**FIGURE 26: CONFIGURATION OF COMPILER BASCOM 8051**

- Ic) Compile the source file by pressing the button with the icon of an integrated circuit. Presence of file grifo\_mm.dat in BASCOM installation folder is required in order to compile correctly:

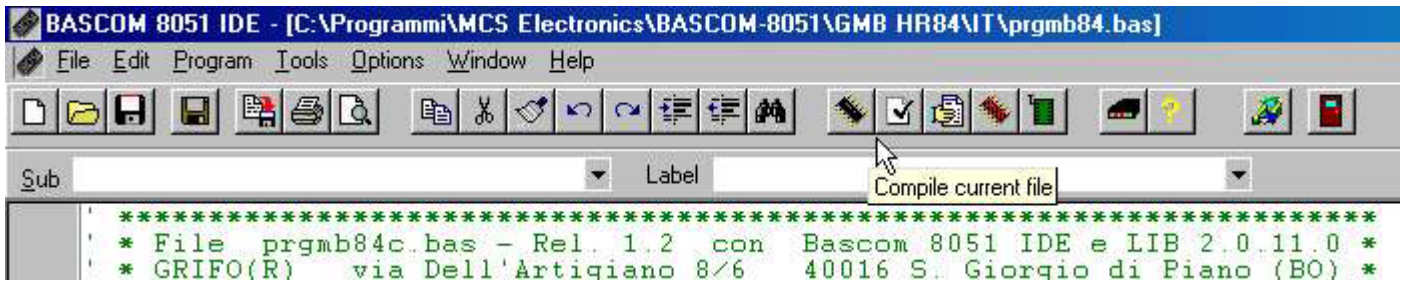


FIGURE 27: COMPILATION WITH BASCOM 8051

## II) Ricompilazione with $\mu C/51$

- Iia) After opening standard editor uedit.exe, load the source file pressing the fifth button from the left, the presence of file canary.h in the same folder of file prgmb84.c is required for a correct compilation:

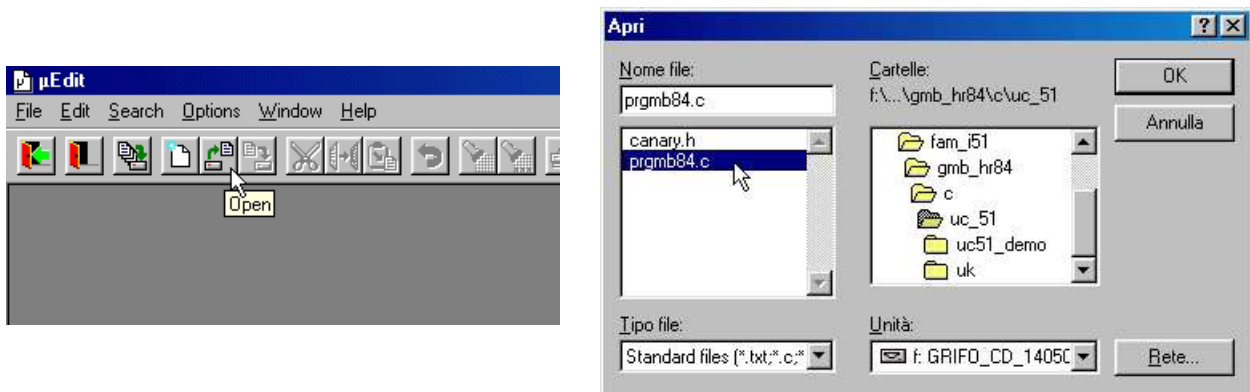


FIGURE 28: LOADING SOURCE FILE WITH  $\mu C/51$

- Iib) Open also MakeFile editor, that is program umshell.exe, and load file prgmb84.mak with the menu File | Load:

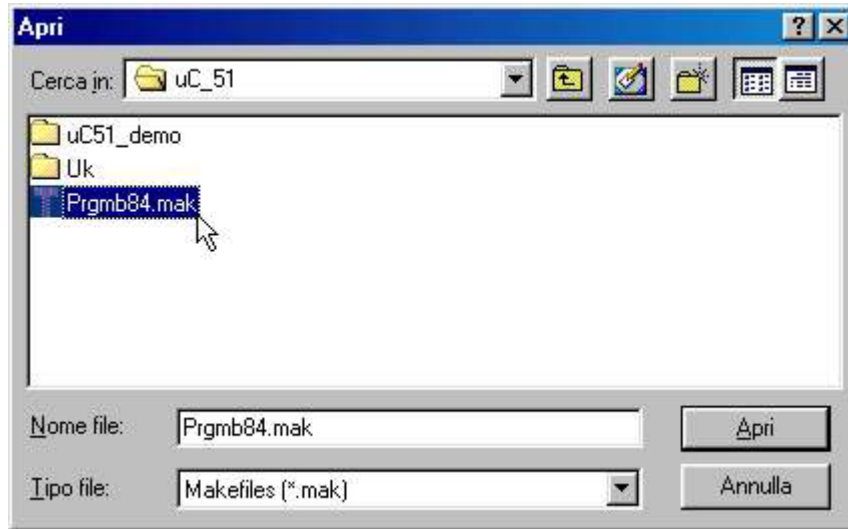


FIGURE 29: LOADING MAKEFILE (COMPILING CONFIGURATION) WITH  $\mu$ C/51

IIc) Compile the source file pressing the first button from the right:

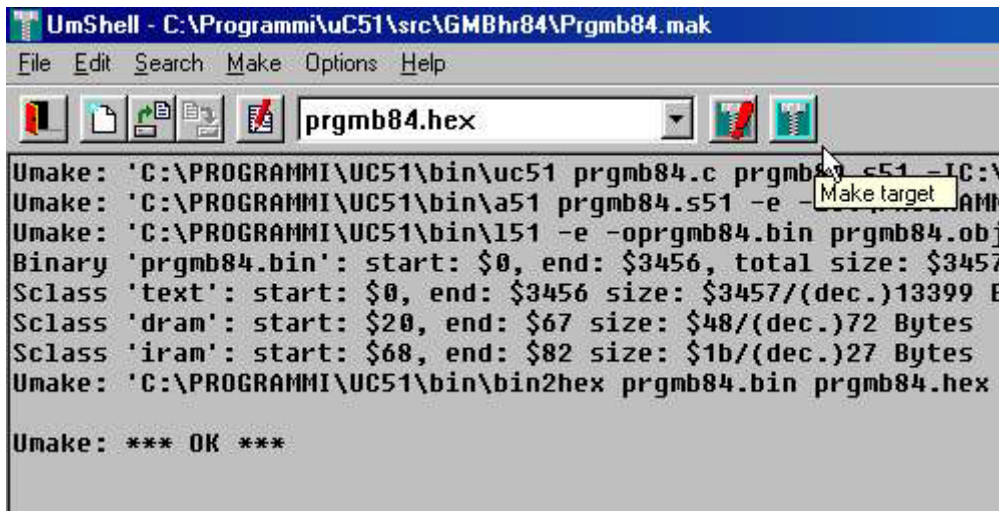


FIGURE 30: COMPILATION USING  $\mu$ C/51

III) *Ricompilation using LADDER WORK.*

IIIa) After opening IDE of LADDER WORK, open the schematic file called prgmb84.pjn with menu File | Open:

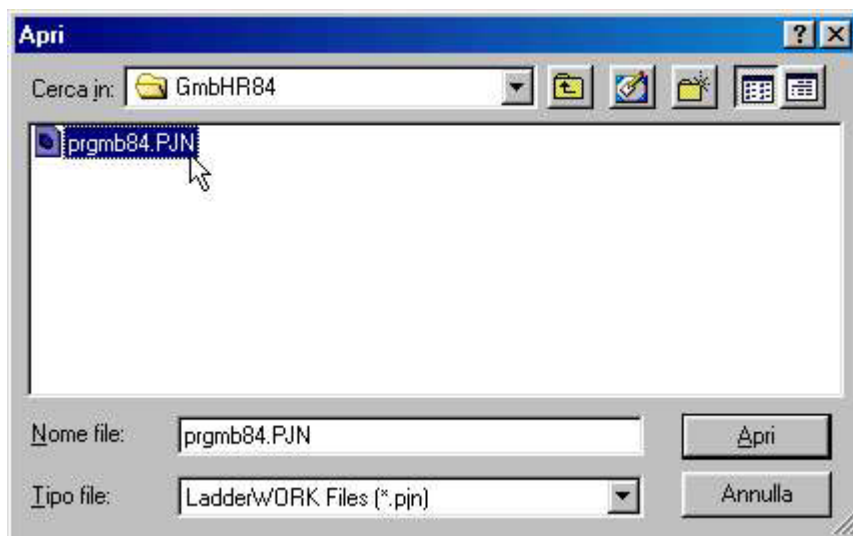
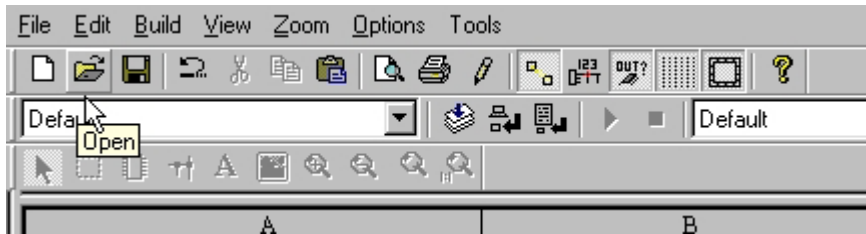


FIGURE 31: LOADING SOURCE SCHEMATIC WITH LADDER WORK

IIIb) Assure that the selected profile is the one specific for GMM 5115 & GMB HR84:

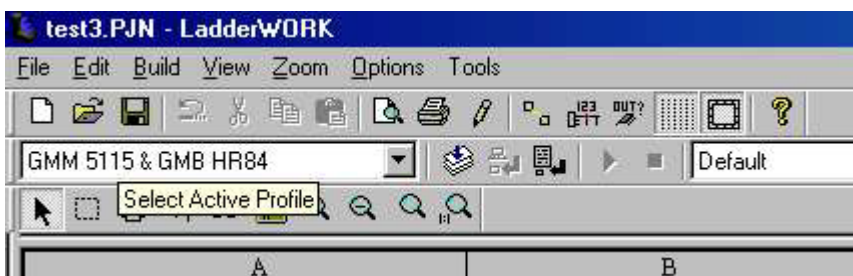


FIGURE 32: COMPILER CONFIGURATION FOR LADDER WORK

IIIc) Compile the source schematic pressing the first button from the right:

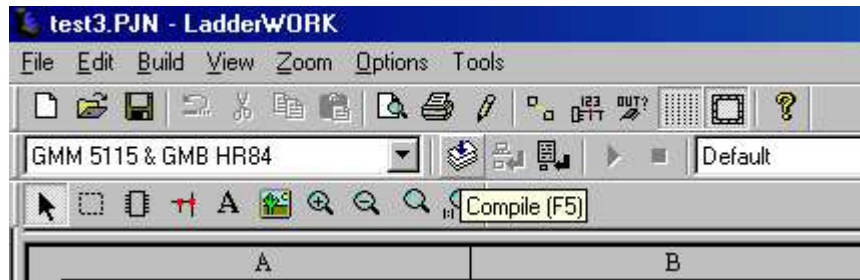


FIGURE 33: COMPILATION WITH LADDER WORK

- C4) Reperform the programming of the obtained HEX file in the Mini Module FLASH, by executing again the points B3÷B17.  
About the FLASH MAGIC settings, please remind that they could be inserted only the first time in fact the same program maintains the last setting sucesfully used.

When during execution of the steps above described a problem or a malfunction is found, we suggest to read and repeat again all the steps carefully and if malfunction persists please contact directly **grifo®** technician.

Instead when execution of all the steps above described is right, the user has realized his first application program that coincides with demo of **GMM 5115 & GMB HR84**.

At this point it is possible to modify the source of the demo/s program according to application requirements and test the obtained program with the steps above listed (from B3 to C4) in cyclic mode, until the developed application program is completely well running.

When this focus is reached the developmnet P.C. can be eliminated, by obtaining a self running card, as below described:

## D) PREPARAZIONE DEFINITIVA DELL'APPLICAZIONE

- D1) Impostare modalità RUN (DSW1.1=OFF) e scollegare P.C. di sviluppo.

## PERIPHERAL DEVICES SOFTWARE DESCRIPTION

In the previous paragraphs are described the peripheral connections to the field, while in this one there is a specific description of registers meaning and function (please refer to I/O addresses table, for the registers names and addresses values).

For a more detailed description of the devices, please refer to documentation of **GMB HR84** and **GMM 5115**.

In the following paragraphs the **D7÷D0** and **.0÷7** indications denote the eight bits of the combination used in I/O operations.

### RELAYS OUTPUTS

Status of 4 digital relays outputs is set through 4 signals of 28 pin socket ZC1, which means I/O TTL signals of **GMM 5115**.

When the signal of socket ZC1 is set to logic state low (logic 0), the corresponding output is activated (relay contact is connected to its common pin).

Viceversa when the signal is set to logic state high (logic 1) the corresponding output is deactivated (relay open).

As previously said, LEDs LD1÷4 provide a visual indication of digital outputs status (LED ON = output activated).

Summarizing, the correspondance is:

P1.4 , OUT A1	->	LED LD1
P1.5 , OUT A2	->	LED LD2
P1.6 , OUT B1	->	LED LD3
P1.7 , OUT B2	->	LED LD4

### SERIAL LINE

The **GMM 5115** signals used are the ones called TxD and RxD.

### I<sup>2</sup>C BUS

Signals used are pin 3 of CN3 (SDA) and pin 2 of CN3 (SCL).

Please remark that **GMM 5115** is not provided with an hardware I<sup>2</sup>C BUS interface, so this must be emulated by software using the high level instructions of the development language or the functions that can be found in the demo programs.

Signals SDA and SCL are also provided with 4.7 kΩ pull up resistors.

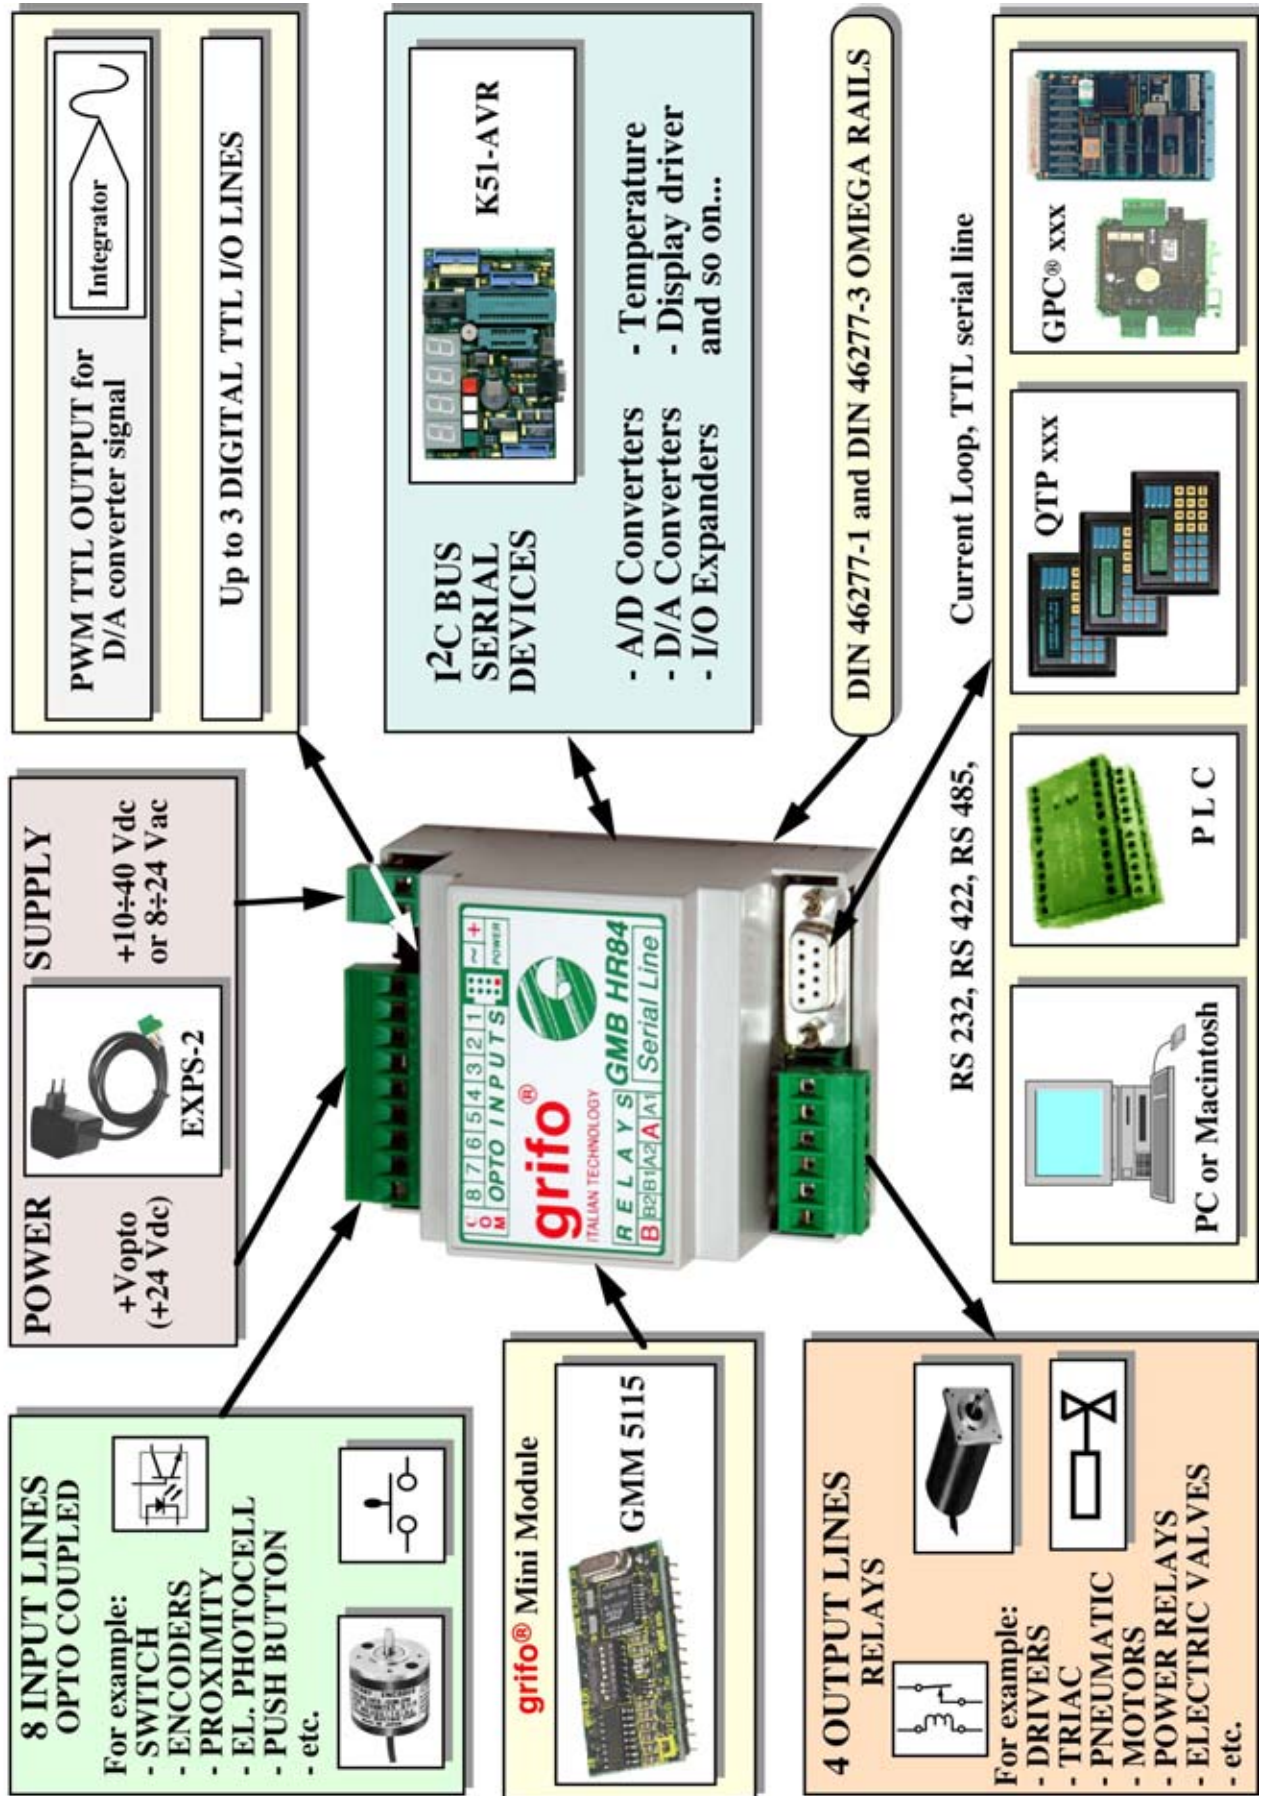


FIGURE 34: CONNECTIONS EXAMPLE

## **OPTOCOUPLED INPUTS**

Status of 8 digital optocoupled inputs can be acquired by software reading the status of corresponding **GMM 5115**.

When NPN or PNP inputs are enabled, corresponding signals are at logic state low (logic 0), viceversa when inputs are disabled a logic level high is acquired (logic 1).

As previously said, LEDs LD7÷14 give a visual indication of digital inputs status (LED ON means input activated).

Summarizing, the correspondance is:

P1.1 , IN1	->	LED LD14
P1.2 , IN2	->	LED LD13
P3.2 , IN3	->	LED LD12
P3.3 , IN4	->	LED LD11
P3.4 , IN5	->	LED LD10
P3.5 , IN6	->	LED LD9
P3.6 , IN7	->	LED LD8
P3.7 , IN8	->	LED LD7

## **DIGITAL TTL I/O**

They are pins 3, 5, 6 and 8 of connector CN4, connected respectively to signals P4.0, P4.1, P1.3 and P1.0.

Pin 8 of CN4 is connected to a pull-down of 4.7 kohm (if J6 is connected in 1-2), if this condition is acceptable then it can be used as I/O signal.

In addition, pin 4 is connected to a LED (LD6) that visualizes its status.

## APPENDIX A: ALPHABETICAL INDEX

**C**

COM 1 16  
CONNECTORS 10  
  CN3 18  
  CN5 12  
  CN6 14  
  CN7 20  
  CN8 13  
CONTAINER 10  
CURRENT LOOP 10, 14  
CURRENT ON +5 VDC 11  
CURRENT REQUIRED 11  
CUT-OFF FREQUENCY 10

**D**

DIGITAL INPUTS 10, 16, 38  
DIN 10  
DIR 10

**E**

EXPS-2 22

**H**

HOW TO START 26

**I**

I/O TTL 6, 10  
I<sup>2</sup>C BUS 8, 10, 11, 13, 36  
IN N-1 16

**L**

LED 38  
LEDS 10

**M**

MINI MODULE 10

**N**

NPN 6, 10, 16

**O**

OPTOCOUPLED INPUTS **38**  
OPTOCOUPLEDERS INPUT VOLTAGE **11**

**P**

PNP **6, 10, 16**  
POWER REQUIRED FOR OPTOCOUPLEDERS **11**  
POWER SUPPLY **10, 11, 12, 22**  
POWER SUPPLY TO OPTOCOUPLEDERS **22**

**R**

RELATIVE HUMIDITY **10**  
RELAY OUTPUTS **6, 10, 18, 36**  
RELAYS MAX CURRENT **11**  
RS 232 **14**  
RS 422 **10, 14**  
RS 485 **10, 14**

**S**

SCL **13, 36**  
SDA **13, 36**  
SIZE **10**  
SWITCHING **10**

**T**

TEMPERATURE RANGE **10**  
TERMINATION NETWORK RS 422-485 **11**  
TRANSZORB™ **22**  
TTL **14**

**W**

WEIGHT **10**